CLENSTON Air & Dirt Separator

Models CL50, CL65, CL80, CL100, CL125, CL150, CL200

IMPORTANT NOTE

THESE INSTRUCTIONS MUST BE READ
AND UNDERSTOOD BEFORE INSTALLING,
COMMISSIONING, OPERATING OR
SERVICING EQUIPMENT



Customer After Sales Services

Telephone: 01202 662555 E-mail: service@hamworthy-heating.com Fax: 01202 662522

Technical Enquiries

To supplement the detailed technical brochures, technical advice on the application and use of products in the Hamworthy Heating range is available from our technical team in Poole and our accredited agents.

Site Assembly

Hamworthy offer a service of site assembly for many of our products where plant room access is restricted. Using our trained staff we offer a higher quality of build and assurance of a boiler built and tested by the manufacturer.

Commissioning

Commissioning of equipment by our own engineers, accredited agents or specialist sub-contractors will ensure the equipment is operating safely and efficiently.

Service Contracts

Regular routine servicing of equipment by Hamworthy service engineers inspects the safety and integrity of the plant, reducing the risk of failure and improving performance and efficiency. Service contracts enable you to plan and budget more efficiently.

Breakdown service, repair, replacement

Hamworthy provide a rapid response breakdown, repair or replacement service through head office at Poole and accredited agents throughout the UK.

Spare Parts

We offer a comprehensive range of spare parts, providing replacement parts for both current and discontinued products. Delivery options are available to suit you. Please refer to our website for more details.

CLENSTON AIR & DIRT SEPARATOR

Installation, Commissioning and Operating Instructions

Models: CL50, CL65, CL80, CL100 CL125, CL150, CL200

NOTE: THESE INSTRUCTIONS MUST BE READ AND UNDERSTOOD BEFORE INSTALLING, COMMISSIONING, OPERATING OR SERVICING EQUIPMENT.

COUNTRY OF DESTINATION: UNITED KINGDOM & REPUBLIC OF IRELAND

PUBLICATION NO. 500001301 ISSUE 'A' JANUARY 2014

CONTENTS

PAGE

Introduction	 1
Installation Flanges Commissioning Maintenance	
Technical data	 2
Pressure drop Rating	
Part Numbers	 4
Spare part numbers	

CLENSTON - AIR AND DIRT SEPARATORS

Introduction:

Clenston air & dirt separators must be installed by a competent person. All installations must conform to relevant regulations. Health & safety requirements must also be taken into account when installing any equipment.

The Clenston air & dirt separator units are designed to:

- a) remove dissolved gases from liquids such as air from water. When water is heated or the pressure reduced, gas microbubbles are released into the System. These microbubbles can be the cause of major problems such as pump failure, Corrosion and energy loss.
- b) remove dirt particles from heating and chilled water systems.

 When installed the Clenston can remove dirt particles as small as 10 microns.

Installation:

Ensure there is clear access to the front of the unit to allow safe operation of the drain/flushing valves. Install at a sufficient height to allow the appliance to be safely drained. Take care when lifting and handling the unit.

This combined unit must be installed at the hottest part of the system (before the pumps). In a heating system this is the main flow from the boilers.

In a chilled water system the unit must be located in the return close to the chiller.

The static head must not exceed 30 metres in a Heating system for optimum performance. Maximum static head must not exceed 15 metres in a chilled water system. N.B. if the static head is greater than these figures the efficiency of the Clenston is reduced.

It is considered good practice to fit an isolation valve either side of the unit to allow for removal.

Flanges:

All flanges are to BS 4504 PN16 as standard.

Commissioning:

The Clenston units are fitted with a fast bleed valve which should be used when initially filling the system. The same valve is used for draining off "scum" and also prevents the possibility of dirt clogging the air vent.

Please contact Hamworthy Heating Service department for further details of our commissioning services.

Maintenance:


Maintenance will be required to remove trapped dirt and sludge. Opening the ball valve at the bottom of the unit does this. The valve may be opened while the system is under pressure. Scalding is a danger at high pressures and temperatures. Ensure that the water is safely piped to drain before opening the valve.

The system pressure will flush the dirt out. Leave the valve open until the collected dirt has been flushed out; repeat this operation every few days. Once the water is clear it may be possible to drain every 6 months or so depending on the size and age of the system.

Most of the dissolved air will be removed in a few days. However this may vary from system to system .In large systems it may take several weeks.


Dirt separators can only remove dirt that is circulating.

Technical data:

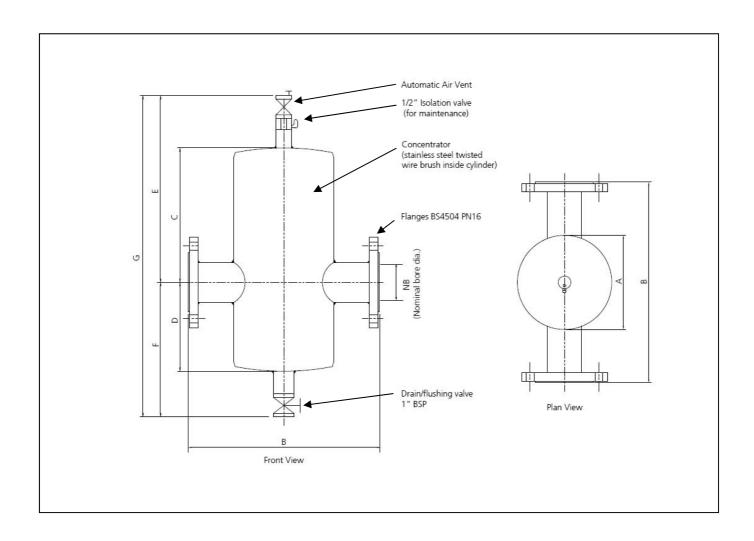

Duaduat	Dimensions								Dry Weight	
Product Code	Nominal bore	Pipe Connection	Α	В	С	D	E	F	G	Kg
CL-50	50	DN50 - PN16	165	350	225	125	358	225	583	15
CL-65	65	DN65 - PN16	165	350	225	125	358	225	583	16
CL-80	80	DN80 - PN16	219	460	300	200	433	300	733	29
CL-100	100	DN100 - PN16	219	460	300	200	433	300	733	31
CL-125	125	DN125 - PN16	273	630	435	335	568	435	1003	39
CL-150	150	DN150 - PN16	324	630	435	335	568	435	1003	46
CL-200	200	DN200 - PN16	407	780	475	375	608	475	1083	62

Calculated pressure drop for the air & dirt separator

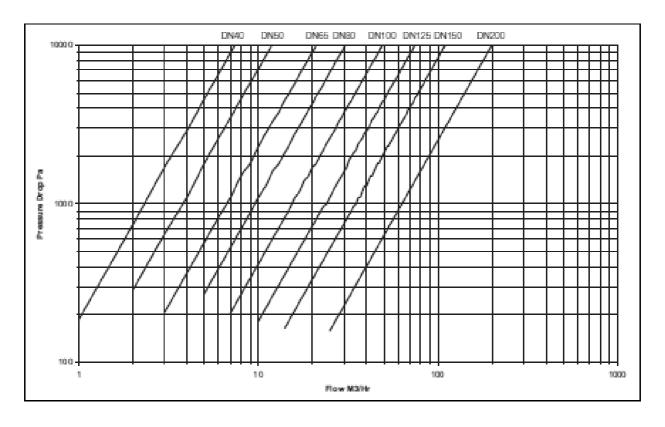

Rating:

Maximum working pressure: 10 Bar

Test pressure: 16 Bar

Max. working Temp: 110°C

MODEL RANGE & PART NUMBERS:

Clenston CL50 Clenston CL65 Clenston CL80 Clenston CL100 Clenston CL125 Clenston CL150 Clenston CL200	532714058 532714059 532714060 532714061 532714062
Spare Part Numbers:	
Ball valve for drainAutomatic air vent (AAV)	

Isolation valve for AAV531905017

For service or spares please contact:-Hamworthy Heating Limited Wessex House New Fields Business Park Stinsford Road Poole, Dorset BH17 0NF

Phone Number 01202 662500
Fax Number 01202 662522
Service 01202 662555
Spares 01202 662525
Technical 01202 662505

NOTES:	

NOTES:

Hamworthy Heating Accredited Agents

Southern Ireland (Sales & Service)

HEVAC Limited

Naas Road, Dublin 12, Ireland

tel: 00 353 141 91919 fax: 00 353 145 84806

email: info@hevac.ie

Northern Ireland (Sales & Service)

HVAC Supplies Limited

Unit A6, Dargan Court, Dargan Crescent, Belfast BT3 9JP

tel: 028 9077 7737

email: hvacsupplies@btconnect.com

Scotland (Sales & Service)

McDowall Modular Services

2 Penson Road, Queenslie Industrial Estate, Glasgow, G33 4AG

tel: 0141 336 8795 fax: 0141 336 8954

email:

MMS.McDowallModularServices@hamworthy-heating.com

North East England (Service)

Allison Heating Products

12 Sunnyside Lane, Cleadon Village, Sunderland SR6 7XB

tel: **0191 536 8833** fax: **0191 536 9933** email: **allison.heating@gmail.com**

Hamworthy Heating Customer Service Centre

Sales

tel: 01202 662552

email: sales@hamworthy-heating.com

Technical Enquiries

tel: 01202 662505

email: technical@hamworthy-heating.com

Servicing

tel: 01202 662555

email: service@hamworthy-heating.com

Spares

tel: 01202 662525

email: spares@hamworthy-heating.com

British engineering excellence from Hamworthy Heating; the commercial heating and hot water specialists.



Customer Service Centre

Hamworthy Heating Limited, Wessex House, New Fields Business Park, Stinsford Road, Poole, Dorset, BH17 ONF

Telephone: **01202 662500**Fax: **01202 662522**

Email: service@hamworthy-heating.com Website: www.hamworthy-heating.com