

Split type room air conditioner
Wall-mounted type
Inverter



SERVICE INSTRUCTION



Indoor unit	Outdoor unit
ASHG07KPCA	AOHG07KPCA
ASHG09KPCA	AOHG09KPCA
ASHG12KPCA	AOHG12KPCA

CONTENTS

1. DESCRIPTION OF EACH CONTROL OPERATION

1. COMPRESSOR CONTROL.....	01-01
2. AUTO CHANGEOVER OPERATION.....	01-05
3. INDOOR FAN CONTROL.....	01-06
4. OUTDOOR FAN CONTROL.....	01-10
5. LOUVER CONTROL.....	01-12
6. TIMER OPERATION CONTROL.....	01-14
7. DEFROST OPERATION CONTROL.....	01-16
8. OFF DEFROST OPERATION CONTROL.....	01-18
9. VARIOUS CONTROL.....	01-19
10. VARIOUS PROTECTIONS.....	01-22

2. TROUBLESHOOTING

1. ERROR DISPLAY.....	02-01
2. TROUBLESHOOTING WITH ERROR CODE.....	02-03
3. TROUBLESHOOTING WITH NO ERROR CODE.....	02-23
4. PARTS INFORMATION.....	02-28




Wall-mounted type **INVERTER**

1 . DESCRIPTION OF EACH CONTROL OPERATION


1. COMPRESSOR CONTROL

1. COMPRESSOR FREQUENCY AT NORMAL START-UP

Compressor frequency soon after starting is controlled as below.

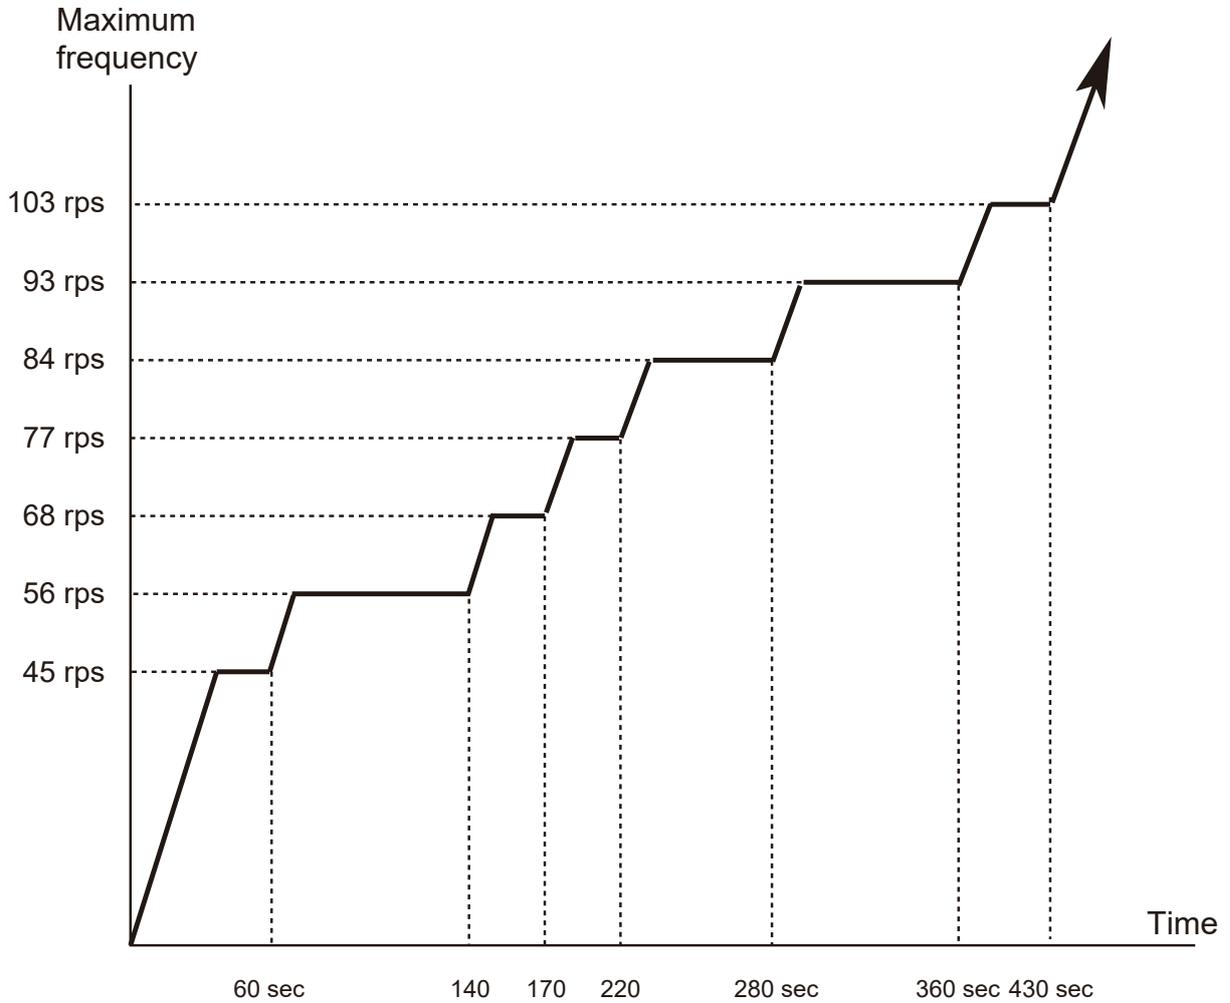

Forced 45 rps operation
for 60 seconds from start-up

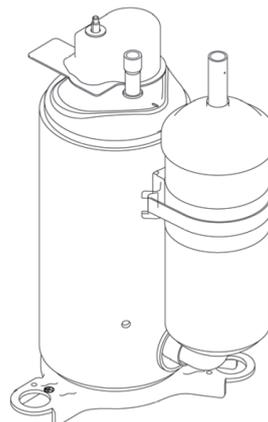

Compressor
DSG066MJA

2. COOLING OPEARTION

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between set temperature and present room temperature, and controls the operation frequency of the compressor.

If the room temperature is 2°C higher than set temperature, the compressor operation frequency will attain to maximum performance.


If the room temperature is some degrees lower than set temperature, the compressor will be stopped.

When the room temperature is between +2°C to -2.5°C of the set temperature, the compressor frequency is controlled within the range shown in Table1. However, the maximum frequency is limited in the range shown in Fig.1 based on the indoor fan mode and the outdoor temperature.

Table.1

	Minimum frequency	Maximum frequency
AOHG07KPCA	10 rps	84 rps
AOHG09KPCA	10 rps	84 rps
AOHG12KPCA	10 rps	90 rps

Fig.1 Outdoor temperature zone

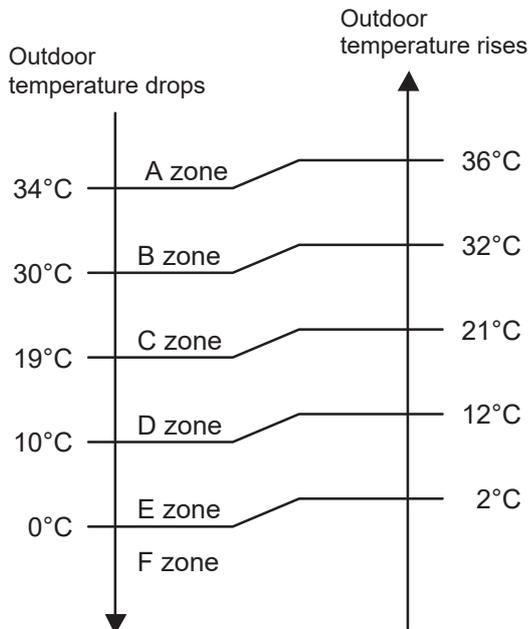

Limit of maximum speed based on outdoor temperature

AOHG07/09KPCA

Outdoor temp. zone	Indoor fan mode			
	Hi	Me	Lo	Quiet
A zone	84 rps	49 rps	36 rps	24 rps
B zone	84 rps	49 rps	36 rps	24 rps
C zone	84 rps	49 rps	36 rps	24 rps
D zone	60 rps	44 rps	34 rps	22 rps
E zone	60 rps	44 rps	34 rps	22 rps
F zone	60 rps	44 rps	34 rps	22 rps

AOHG12KPCA

Outdoor temp. zone	Indoor fan mode			
	Hi	Me	Lo	Quiet
A zone	90 rps	52 rps	36 rps	24 rps
B zone	90 rps	52 rps	36 rps	24 rps
C zone	90 rps	52 rps	36 rps	24 rps
D zone	64 rps	46 rps	34 rps	22 rps
E zone	64 rps	46 rps	34 rps	22 rps
F zone	64 rps	46 rps	34 rps	22 rps

3. HEATING OPERATION

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between set temperature and present room temperature, and controls the operation frequency of the compressor.

If the room temperature is 3°C lower than set temperature, the compressor operation frequency will attain to maximum performance.


If the room temperature is some degrees higher than set temperature, the compressor will be stopped.

When the room temperature is between +2.5°C to -3°C of the set temperature, the compressor frequency is controlled within the range shown in Table 2. However, the maximum frequency is limited in the range shown in Fig.2 based on the indoor fan mode and the outdoor temperature.

Table 2

	Minimum frequency	Maximum frequency
AOHG07KPCA	10 rps	114 rps
AOHG09KPCA	10 rps	114 rps
AOHG12KPCA	10 rps	114 rps

Fig.2 Outdoor temperature zone

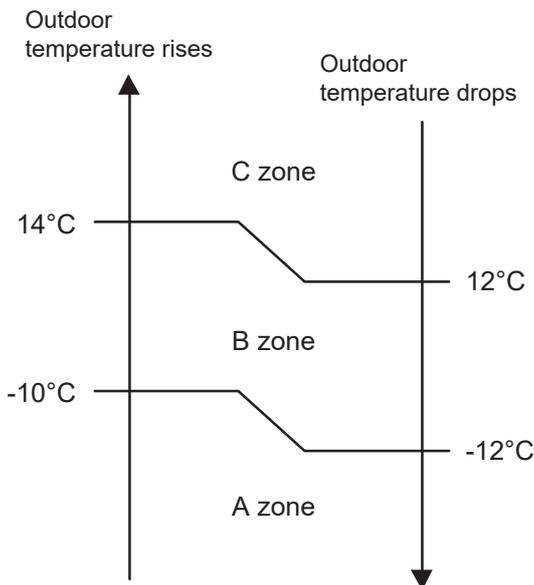

Limit of maximum speed based on outdoor temperature

AOHG07KPCA

Outdoor temp. zone	Indoor fan mode				
	Auto	Hi	Me	Lo	Quiet
C zone	110 rps	110 rps	110 rps	84 rps	52 rps
B zone	114 rps	114 rps	114 rps	96 rps	84 rps
A zone	114 rps	114 rps	114 rps	110 rps	90 rps

AOHG09KPCA

Outdoor temp. zone	Indoor fan mode				
	Auto	Hi	Me	Lo	Quiet
C zone	110 rps	110 rps	110 rps	84 rps	52 rps
B zone	114 rps	114 rps	114 rps	96 rps	84 rps
A zone	114 rps	114 rps	114 rps	110 rps	90 rps


AOHG12KPCA

Outdoor temp. zone	Indoor fan mode				
	Auto	Hi	Me	Lo	Quiet
C zone	110 rps	110 rps	110 rps	73 rps	46 rps
B zone	114 rps	114 rps	114 rps	78 rps	73 rps
A zone	114 rps	114 rps	114 rps	78 rps	78 rps

4. DRY OPERATION

In dry operation, maximum compressor frequency is defined by set temperature, and room temperature as below.

Zone is defined by set temperature and room temperature.

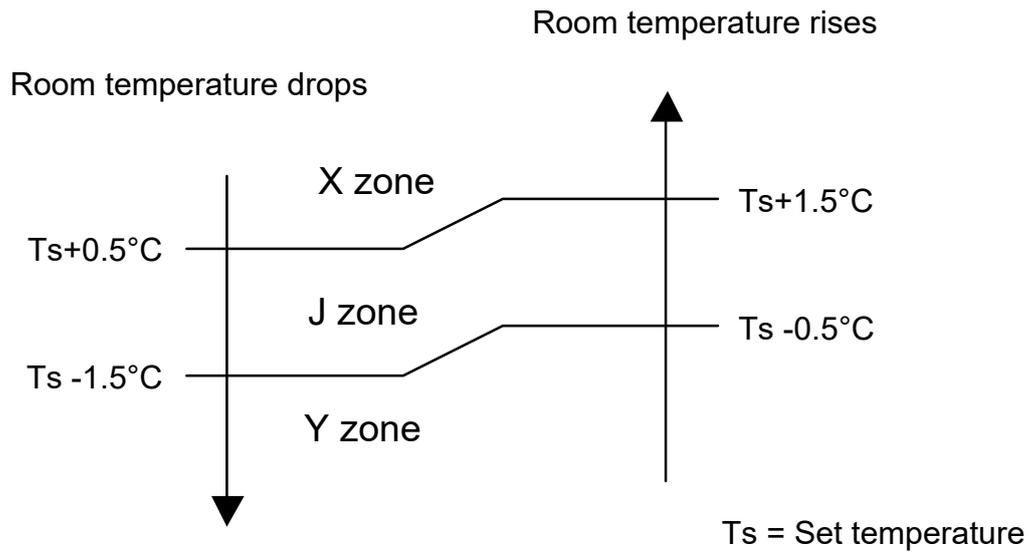


Maximum compressor frequency is defined by zone.

	AOHG07KPCA	AOHG09KPCA	AOHG12KPCA
X zone	24 rps	24 rps	24 rps
J zone	18 rps	18 rps	18 rps
Y zone	0 rps	0 rps	0 rps

2. AUTO CHANGEOVER OPERATION

When air conditioner is set to AUTO mode by remote control, operation starts in the optimum mode from among heating, cooling, dry and monitoring modes.
During operation, the optimum mode is automatically switched in accordance with temperature changes.
Temperature can be set between 18°C and 30°C in 1°C steps.

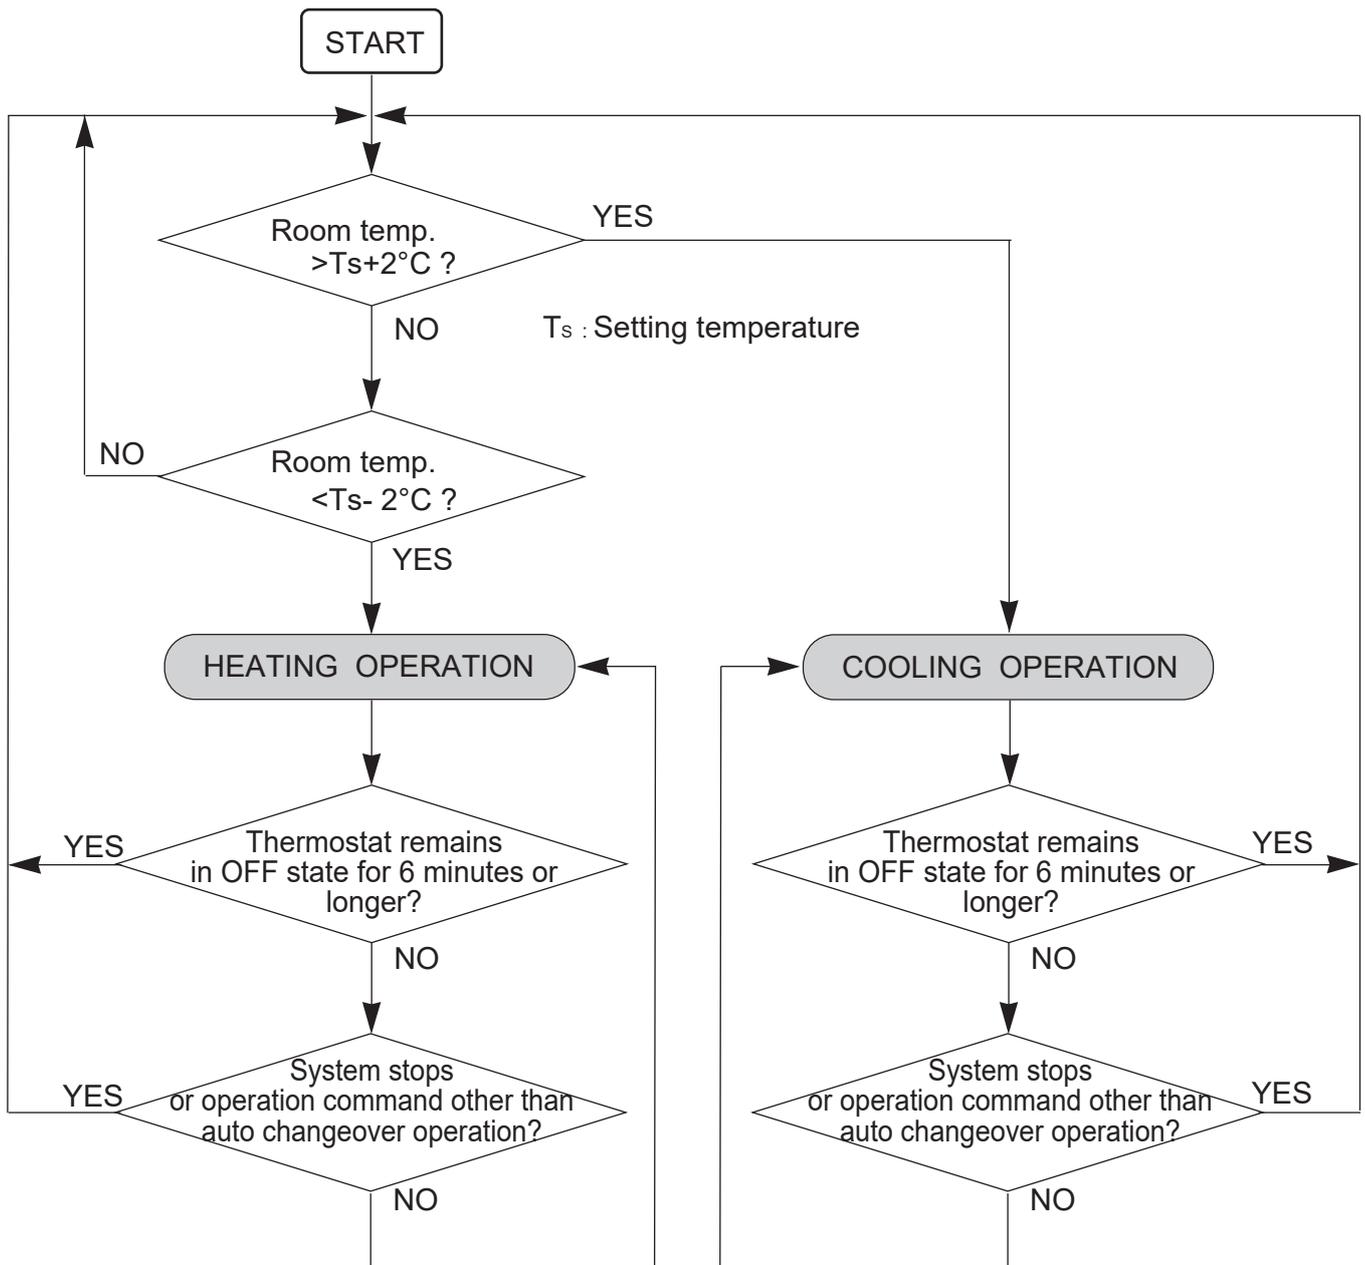

3. INDOOR FAN CONTROL

1. FAN SPEED


Indoor fan speed is defined as below.

Operation mode	Air flow mode	Speed		
		ASHG07KPCA	ASHG09KPCA	ASHG12KPCA
Heating	Powerful	1,370 rpm	1,370 rpm	1,470 rpm
	Hi	1,300 rpm	1,300 rpm	1,400 rpm
	Me+	1,190 rpm	1,190 rpm	1,280 rpm
	Me	1,080 rpm	1,080 rpm	1,140 rpm
	Lo	930 rpm	930 rpm	930 rpm
	Quiet	700 rpm	700 rpm	700 rpm
	Cool air prevention	630 rpm	630 rpm	630 rpm
	S-Lo	580 rpm	580 rpm	580 rpm
Cooling / Fan	Powerful	1,370 rpm	1,370 rpm	1,470 rpm
	Hi	1,300 rpm	1,300 rpm	1,400 rpm
	Me	1,080 rpm	1,080 rpm	1,140 rpm
	Lo	850 rpm	850 rpm	890 rpm
	Quiet	650 rpm	650 rpm	650 rpm
	* Soft Quiet	580 rpm	580 rpm	580 rpm
Dry		X zone: 650 rpm J zone: 650 rpm	X zone: 650 rpm J zone: 650 rpm	X zone: 650 rpm J zone: 650 rpm

***Note**

During Economy operation and operation mode is Fan, air flow is 1 step downs.

(Hi > Me, Me > Lo, Lo > Quiet, Quiet > Soft Quiet)

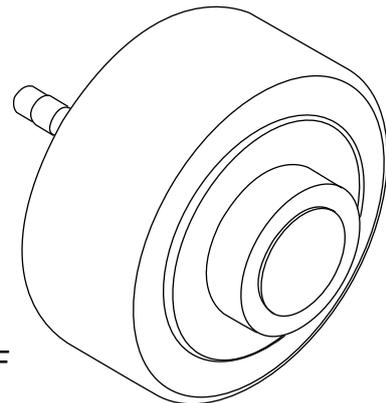

Fan motor
MFD-W30YA2F

2. FAN OPERATION

Airflow can be switched in 5 steps such as Auto, Quiet, Lo, Me, Hi, while indoor unit fan only runs.


When fan mode is set at (Auto), it operates on (Me) fan speed.

3. COOLING OPERATION

Switch the airflow [Auto], and indoor fan motor will run according to room temperature, as below.

On the other hand, if switched in [Hi] ~ [Quiet], indoor motor will run at a constant airflow of [Cool] operation modes Quiet, Lo, Me, Hi, as the previous page.

Fig : Airflow changeover (Cooling : Auto)

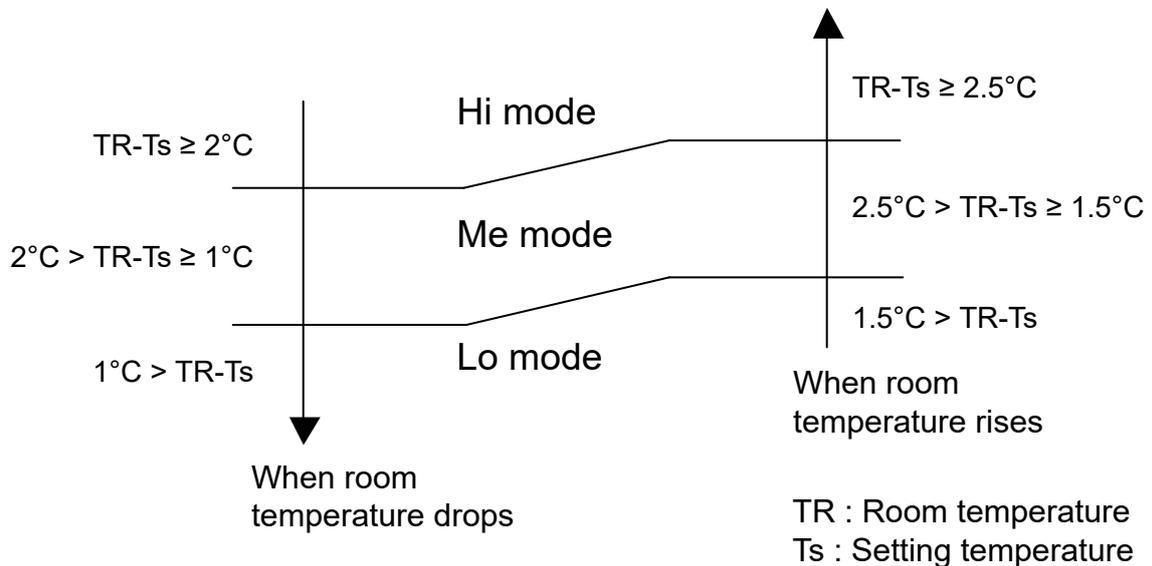

4. DRY OPERATION


As the table in the previous page, during dry operation, fan speed setting can not be changed.

5. HEATING OPERATION

Switch the airflow [AUTO], and the indoor fan motor will run according to a room temperature, as below.

On the other hand, if switched in [Hi] ~ [Quiet], the indoor motor will run at a constant airflow of [Heat] operation modes Quiet, Lo, Me, Hi, as the previous page.


Fig : Airflow changeover (Heating : Auto)

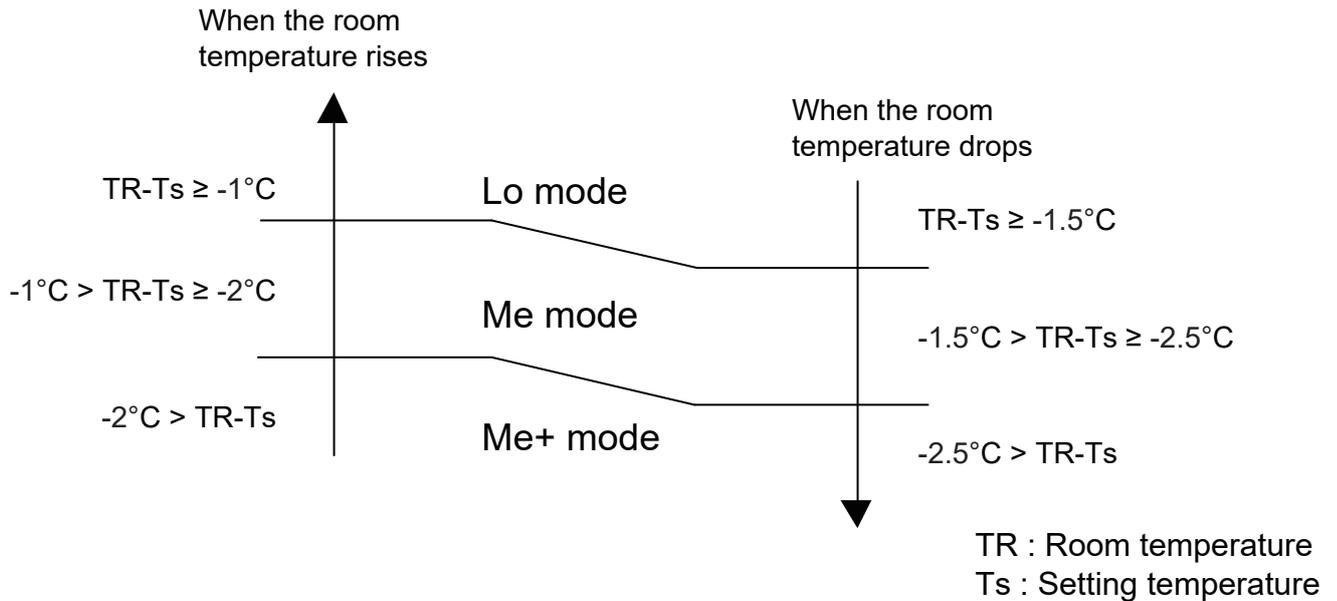

6. COOL AIR PREVENTION CONTROL (HEATING MODE)

The maximum value of the indoor fan speed is set as shown in Fig. based on the detected temperature by the indoor heat-exchanger sensor on heating mode.

Fig : Cool air prevention control

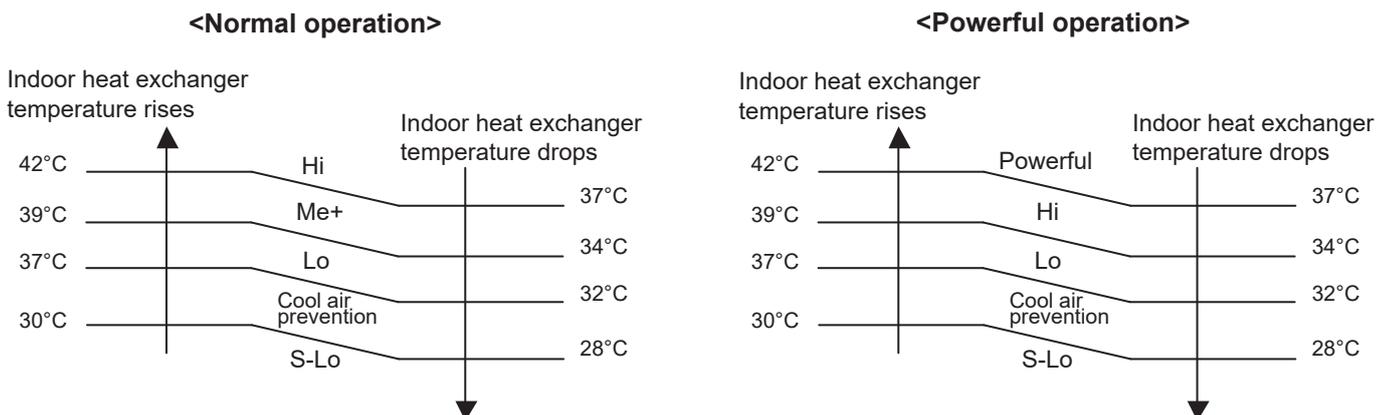

7. MOISTURE RETURN PREVENTION CONTROL (COOLING AND DRY MODE)

Switch the airflow [Auto] at cooling mode, and the indoor fan motor will run as shown in Fig.

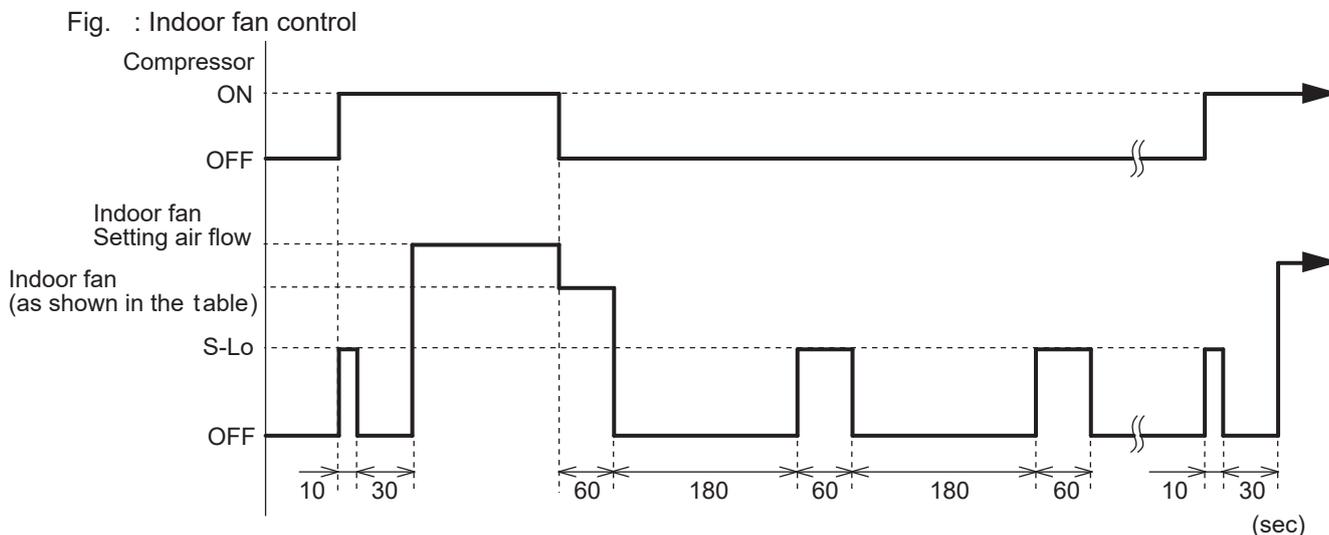


Table : Indoor fan speed

	Dry		Cooling
	X zone	J zone	
ASHG07/09KPCA	650rpm	650rpm	650rpm
ASHG12KPCA	650rpm	650rpm	650rpm

8. CONTROL FOR ENERGY SAVING (COOLING MODE)

Switch the airflow at cooling mode, and the indoor fan motor will run as shown in the above Fig. It depends on the Function setting "Indoor unit fan control for energy saving".

9. DEFROST OPERATION

When the defrost operation starts, the indoor fan runs according to cool air prevention control for 20 seconds. And the fan is stopped if 20 seconds have passed.

When 60 seconds have passed after defrost operation is released, the fan runs according to cool air prevention control

4. OUTDOOR FAN CONTROL

1. OUTDOOR FAN MOTOR

This outdoor unit has a DC fan motor.


(Control method is different between AC and DC motors.)

When fan motor starts to run,
it keeps 500 rpm for 20 seconds.

2. FAN SPEED IN COOLING AND DRY OPERATION

In cooling and dry operation, fan speed is defined
by outdoor temperature and compressor frequency.

Outside air temperature zone selection

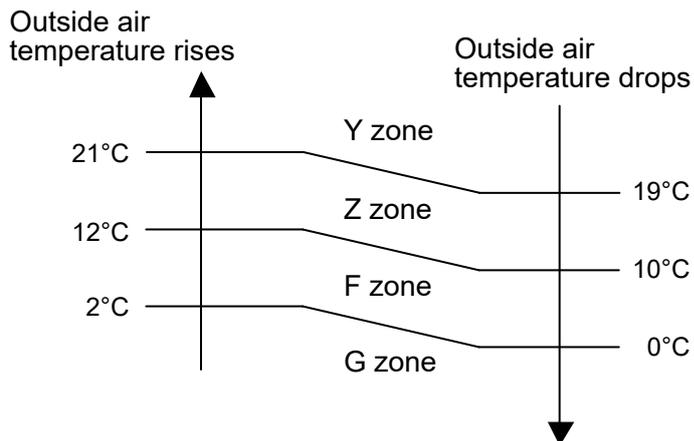

AOHG07/09KPCA

Fan step	Y zone		Z zone Cool, Dry	F zone Cool, Dry	G zone Cool, Dry
	Cooling	Dry			
S-Hi1	950 rpm	-	-	-	-
Hi	950 rpm	-	-	-	-
9	950 rpm	950 rpm	950 rpm	950 rpm	950 rpm
8	780 rpm	780 rpm	780 rpm	270 rpm	250 rpm
7	780 rpm	780 rpm	780 rpm	270 rpm	250 rpm
6	780 rpm	780 rpm	540 rpm	270 rpm	200 rpm
5	780 rpm	780 rpm	360 rpm	240 rpm	170 rpm
4	780 rpm	780 rpm	270 rpm	210 rpm	170 rpm
3	680 rpm	680 rpm	270 rpm	190 rpm	170 rpm
2	610 rpm	610 rpm	270 rpm	190 rpm	170 rpm
1	580 rpm	580 rpm	270 rpm	170 rpm	170 rpm

AOHG12KPCA

Fan step	Y zone		Z zone Cool, Dry	F zone Cool, Dry	G zone Cool, Dry
	Cooling	Dry			
S-Hi1	950 rpm	-	-	-	-
Hi	950 rpm	-	-	-	-
9	950 rpm	950 rpm	950 rpm	950 rpm	950 rpm
8	900 rpm	900 rpm	900 rpm	350 rpm	300 rpm
7	900 rpm	900 rpm	900 rpm	350 rpm	300 rpm
6	900 rpm	900 rpm	560 rpm	350 rpm	300 rpm
5	900 rpm	900 rpm	420 rpm	320 rpm	230 rpm
4	800 rpm	800 rpm	350 rpm	290 rpm	230 rpm
3	680 rpm	680 rpm	350 rpm	270 rpm	230 rpm
2	580 rpm	580 rpm	350 rpm	270 rpm	230 rpm
1	540 rpm	540 rpm	350 rpm	250 rpm	230 rpm

3. FAN SPEED IN HEATING OPERATION


In heating operation, fan speed is defined by compressor frequency.

Fan step	Fan speed	
	AOHG07/09KPCA	AOHG12KPCA
S-Hi2	930 rpm	1,020 rpm
S-Hi1	930 rpm	1,020 rpm
Hi	930 rpm	1,020 rpm
10	690 rpm	790 rpm
9	690 rpm	790 rpm
8	690 rpm	790 rpm
7	690 rpm	790 rpm
6	690 rpm	790 rpm
5	690 rpm	730 rpm
4	550 rpm	630 rpm
3	510 rpm	530 rpm
2	480 rpm	470 rpm
1	480 rpm	470 rpm

5. LOUVER CONTROL

1. VERTICAL LOUVER CONTROL

Whenever button is pressed, air direction will change as below.




Remote control display is not changed.

- When you set the angle to position 4.6 for more than 30 minutes in cooling or dry operation, they automatically return to position 3.
In cooling or dry operation, when the angle is set to position 4.6 for many hours, condensation may be formed, and the drips may wet your property.
- Use the air direction adjustments within the ranges shown above.
- Vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry mode : Horizontal flow ①
Heating mode : Downward flow ⑥

- During AUTO or Heating mode operation, for the first a few minutes after beginning operation, air-flow will be horizontal 1; the air direction cannot be adjusted during this period.
The air flow direction setting will temporarily become 1 when the temperature of the air -flow is low at the start of the Heating mode.

Fig. : Air direction range

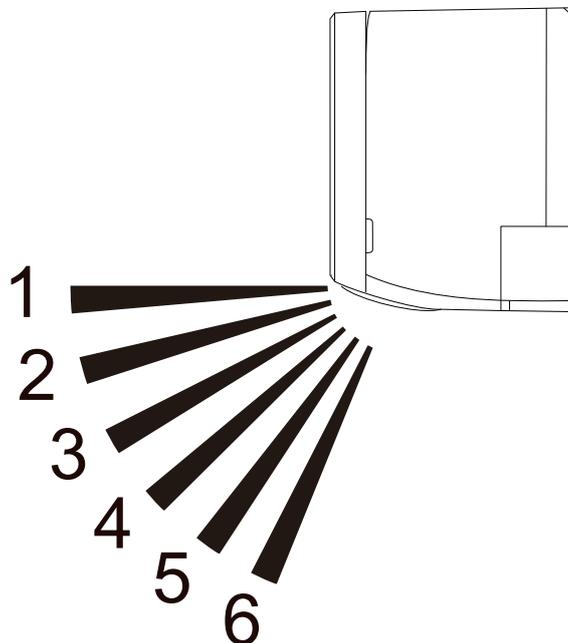

2. SWING OPERATION

When swing signal is received from remote control, vertical louver starts to swing.


Table : Swinging range

	Range
Cooling / Dry mode Fan mode (① ~ ④)	① ⇔ ④
Heating mode Fan mode (③ ~ ⑥)	③ ⇔ ⑥

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

3. ADJUST RIGHT-LEFT LOUVERS

You can move right-left louvers manually to adjust air flow direction.

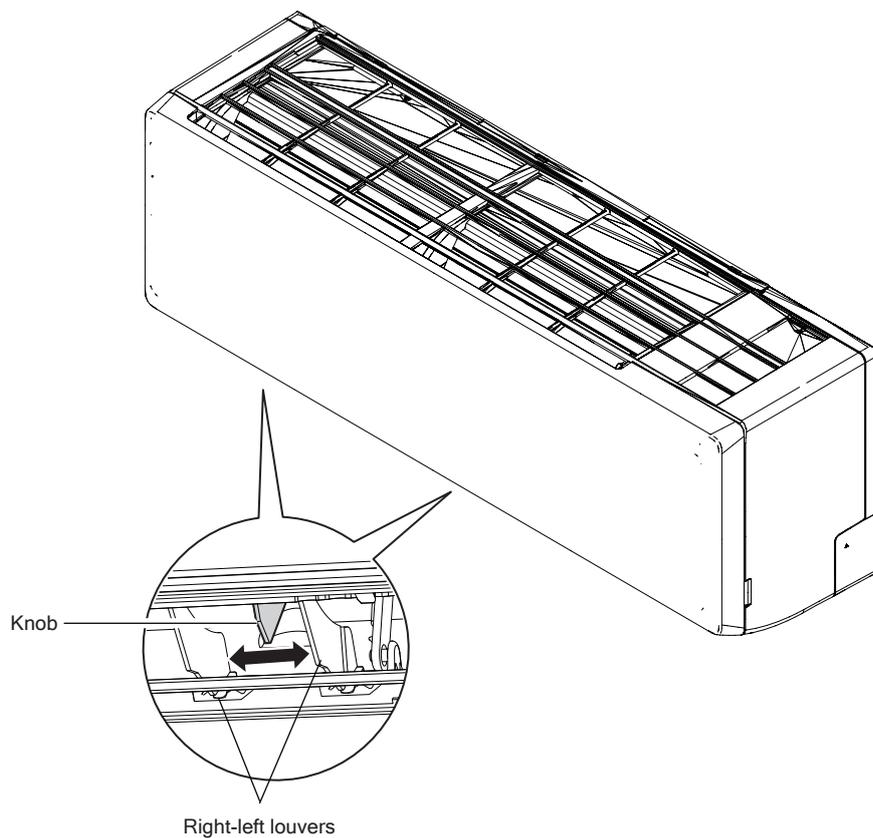


6. TIMER OPERATION CONTROL



6-1 WIRELESS REMOTE CONTROL

1. OPERATION FREQUENCY RANGE

- OFF timer :
When clock reaches set time,
air conditioner will be turned off.

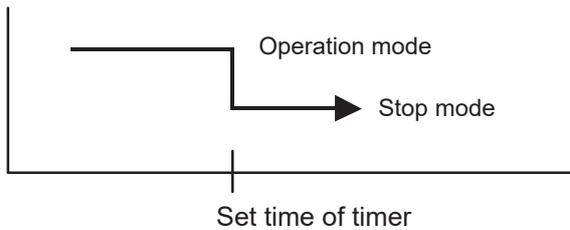


- ON timer :
When clock reaches set time,
air conditioner will be turned on.

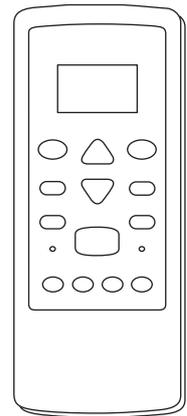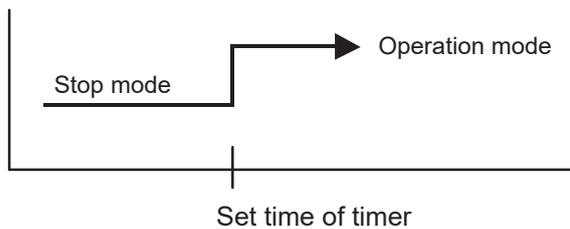

Wireless remote control

2. PROGRAM TIMER

Program timer allows OFF timer and ON timer to be used in combination one time.

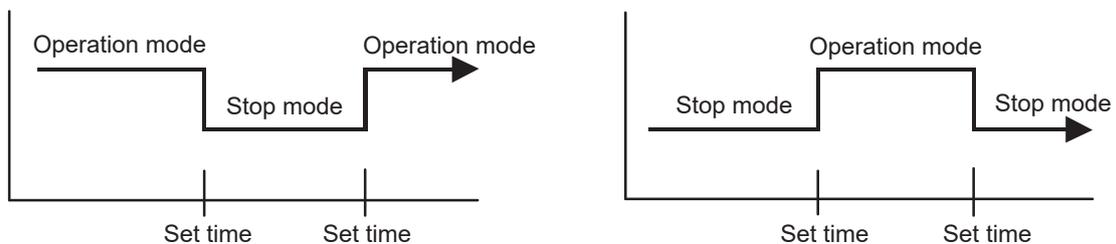


- Operation will start from the timer setting (either OFF timer or ON timer) whichever is closest to the clock's current timer setting.
The order of operations is indicated by the arrow in the remote control unit's display.
- SLEEP timer operation cannot be combined with ON timer operation.

3. SLEEP TIMER

When sleep is set, room temperature is monitored and operation is stopped automatically. When operation mode or set temperature is changed after the sleep timer is set, operation is continued according to the changed setting of the sleep timer from that time ON.


In cooling operation

When sleep timer is set, the set temperature is increased 1°C. It increases the setting temperature another 1°C after 1 hour. After that, the set temperature is not changed and the operation is stopped at the time of timer setting.

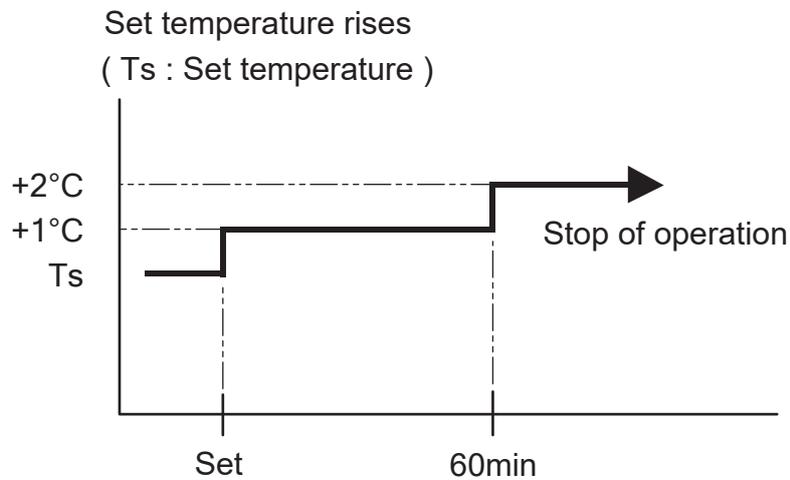

In heating operation

When the sleep timer is set, the set temperature is decreased 1°C. It decreases the set temperature another 1°C every 30 minutes. Upon lowering 4°C, the set temperature is not changed and the operation stops at the time of timer setting.

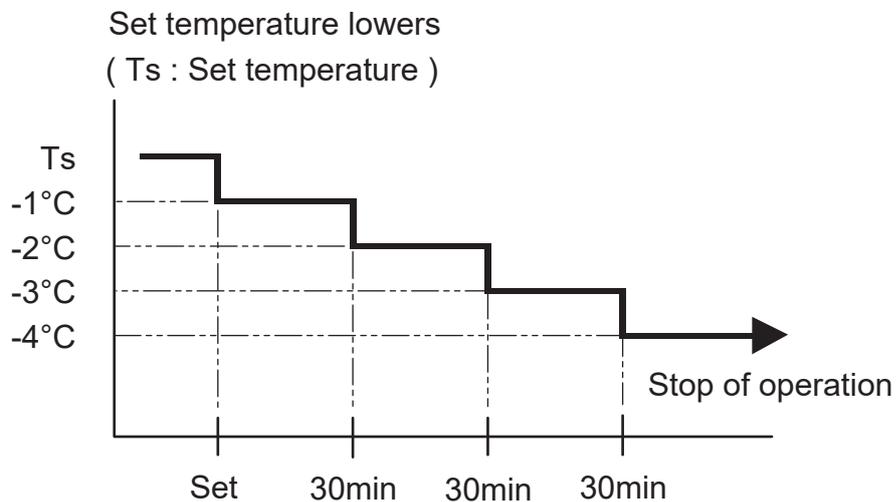

7. DEFROST OPERATION CONTROL

1. CONDITION OF STARTING DEFROST OPERATION

Defrost operation starts when outdoor heat-exchanger temperature sensor (Tn) detects the temperature lower than the values shown below.

Ta : Outdoor temperature

1st time defrosting after starting operation

Compressor integrating operation time	Less than 22 min.	22 to 62 min.	More than 62 min.
Condition	(Does not operate)	$T_n \leq -9^\circ\text{C}$ and $T_n - T_a \geq 5\text{deg}$	$T_n \leq -5^\circ\text{C}$

2nd time and after

Compressor integrating operation time	Less than 25 min.	More than 25 min.
Condition	(Does not operate)	When $T_a \geq -10^\circ\text{C}$ $T_n \leq -17^\circ\text{C}$ <hr style="border-top: 1px dashed black;"/> When $T_a < -10^\circ\text{C}$ ① $T_n \leq -20^\circ\text{C}$ ② $T_n \leq T_a - 7^\circ\text{C}$ ③ $T_n - T_{n10} < -5^\circ\text{C}$ (and $T_n \leq -6^\circ\text{C}$) ④ $T_n - T_{nb} < -2^\circ\text{C}$ (and $T_n \leq -6^\circ\text{C}$)

Tn10 : Temperature of continuous operation at 10minutes.

Tnb : Back 5minutes temperature

Integrating defrost (Constant monitoring)

Compressor integrating operation time	More than 240 min. (For long continuous operation)	More than 213 min. (For long continuous operation)	Less than 10min.*1 (For intermittent operation)
Condition	- 3°C	- 5°C	OFF count of the compressor 40 times.

*1 : If the compressor continuous operation time is less than 10 minutes, the OFF number of the compressor is counted.


If any defrost operated, the compressor OFF count is cleared.

2. CONDITION OF DEFROST OPERATION COMPLETION

Defrost operation is released when outdoor heat-exchanger temperature sensor value is higher than 16°C or compressor operation time has passed 15 minutes.

3. DEFROST FLOWCHART

The defrosting shall proceed by the integrating operation time, outdoor temperature and outdoor heat exchanger temperature as follows.

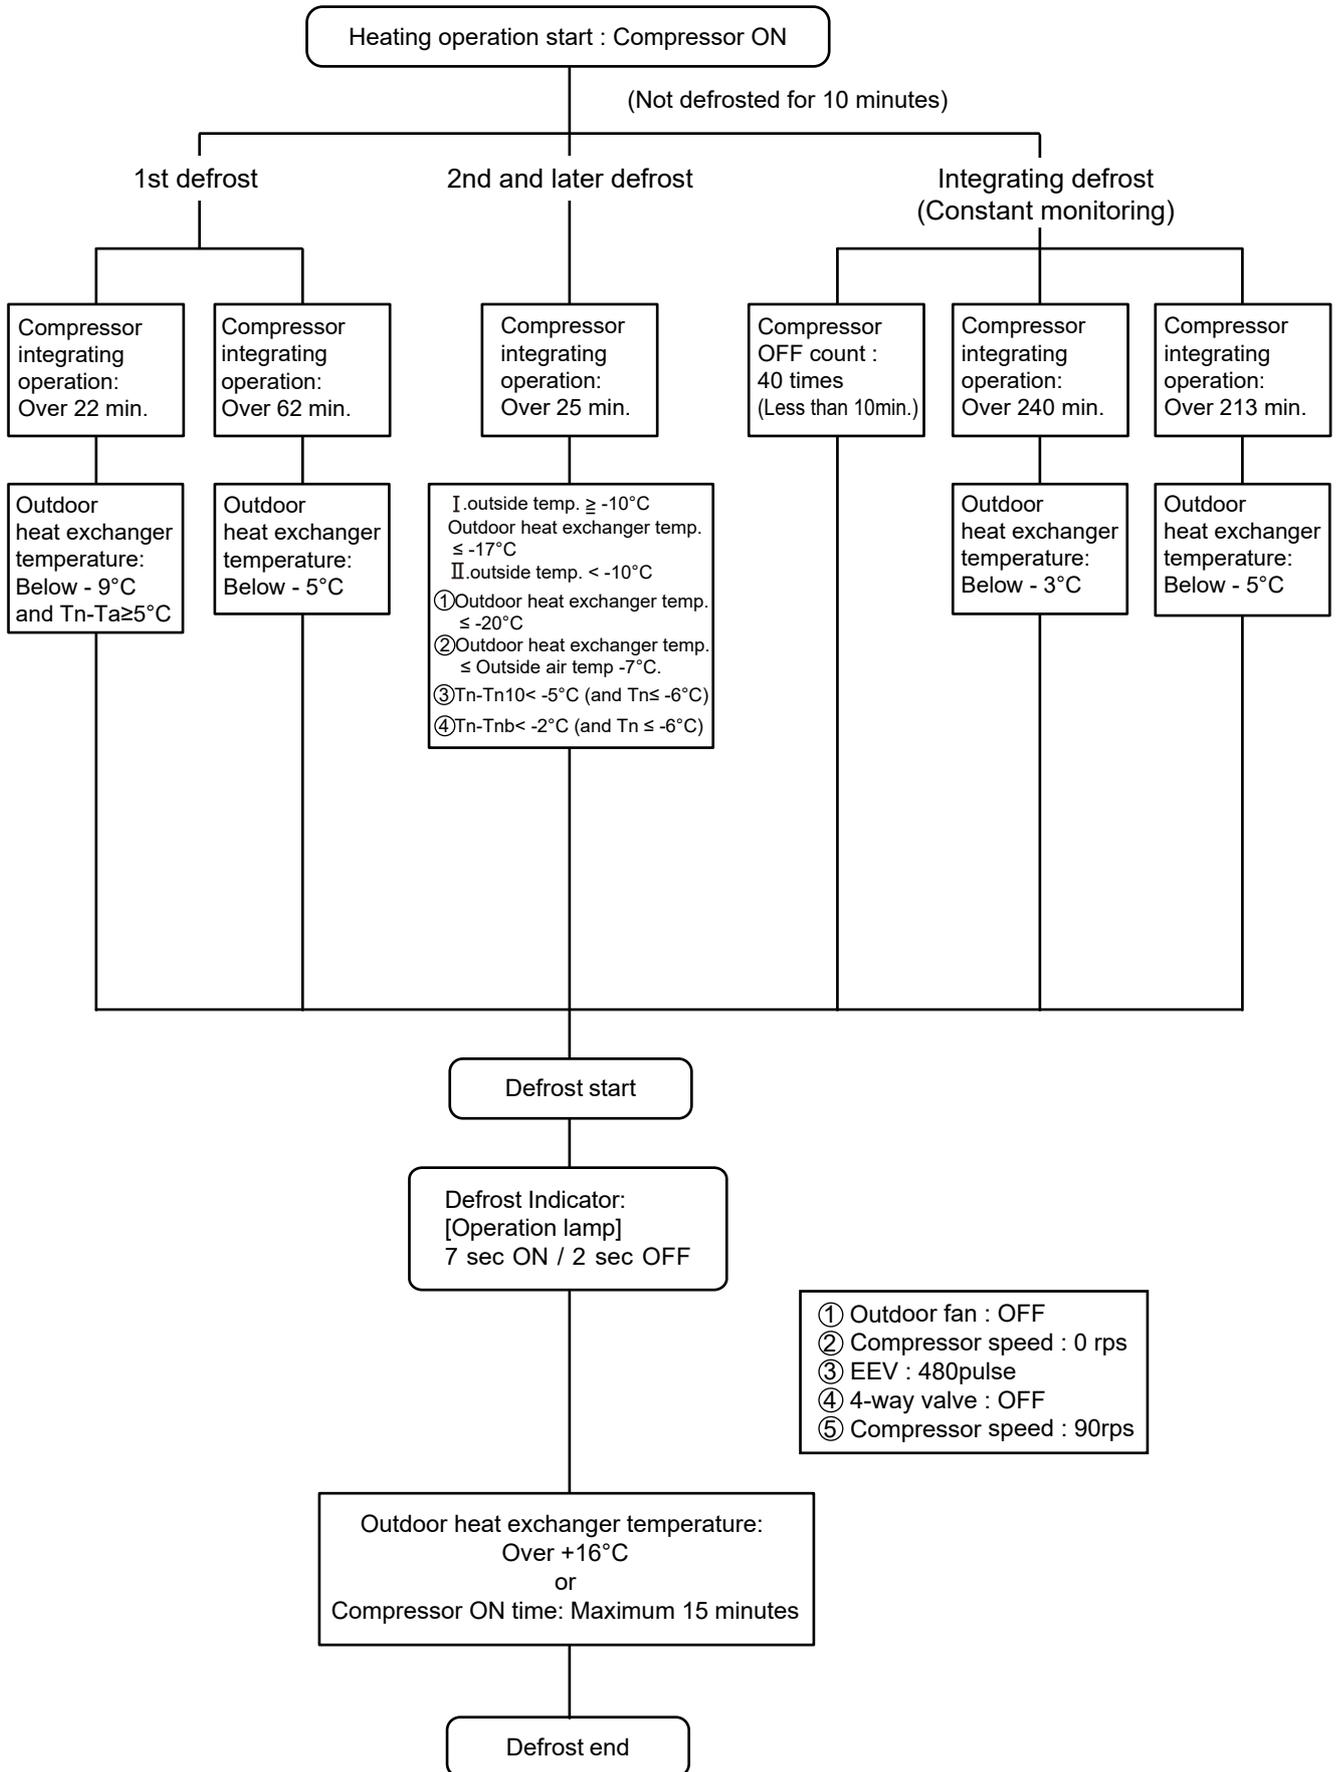

8. OFF DEFROST OPERATION CONTROL

If the outdoor unit is frosted when stopping the heating operation, it stops after performing the automatic defrosting operation.

In this time, if indoor unit operation lamp flashes slowly (7 sec ON / 2 sec OFF), outdoor unit will allow heat-exchanger to defrost, and then stop.

1. OFF DEFROST OPERATION CONDITION

In heating operation, the outdoor heat-exchanger temperature is less than -4°C , compressor continuous operation more than 10 minutes, and compressor operation integrating time lasts for more than 30 minutes.

2. OFF DEFROST END CONDITION

Defrost operation is released when outdoor heat-exchanger temperature rises 16°C or when 15 minutes has passed from defrost start.

9. VARIOUS CONTROL

1. ELECTRONIC EXPANSION VALVE CONTROL

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the table.

The compressor frequency, the temperatures detected by the discharge temperature sensor, the indoor heat exchanger sensor, the outdoor heat exchanger sensor, and the outdoor temperature sensor.

Table :

The pulse range of the electronic expansion valve control

Operation mode	Pulse range
Cooling / Dry mode	between 12 and 480 pulses.
Heating mode	between 0 and 480 pulses.

- * The expansion valve is set at 480 pulses 110 seconds after compressor stopped.
- * At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (528 pulses are input to the closing direction).

2. TEST OPERATION CONTROL

Outdoor unit, may not operate, depending on room temperature.

In this case, keep on pressing the MANUAL AUTO button of indoor unit for more than 10 seconds.

Operation indicator lamp and timer indicator lamp will begin to flash simultaneously during cooling test run.

Then, heating test run will begin in about 3 minutes when HEAT is selected by remote control operation.

To end test operation, press remote control START/STOP button.

3. PREVENTION TO RESTART FOR 3 MINUTES (3 MINUTES ST)

Compressor won't enter operation status for 140 seconds after compressor is stopped, even if any operation is given.

4. 4-WAY VALVE EXTENSION SELECT

When air conditioner is switched from cooling mode to heating mode, compressor is stopped, and 4-way valve is switched in 140 seconds later after the compressor stopped.

5. AUTO RESTART

When the power was interrupted by a power failure, etc. during operation, the operation contents at that time are memorized and when power is recovered, operation is automatically started with the memorized operation contents.

When the power is interrupted and recovered during timer operation, since the timer operation time is shifted by the time the power was interrupted, an alarm is given by blinking (7 sec ON/2 sec OFF) the indoor unit body timer lamp.

[Operation contents memorized when the power is interrupted]

- Operation mode
- Set temperature
- Set air flow
- Timer mode and set time (set by wireless remote controller)
- Set air flow Direction
- Swing
- ECONOMY operation

6. MANUAL AUTO OPERATION (Indoor unit body operation)

When remote control is lost or battery power dissipated, this function will work without remote control.

When MANUAL AUTO button is set more than 3seconds and less than 10seconds, MANUAL AUTO OPERATION will be started as shown below.

To stop operation, press the MANUAL AUTO button for 3seconds.

OPERATION MODE	Auto changeover
FAN CONT. MODE	Auto
TIMER MODE	Continuous (No timer setting available)
SETTING TEMP.	24°C
SETTING LOUVER	Standard
SWING	OFF
ECONOMY	OFF

7. FORCED COOLING OPERATION (TEST OPERATION)

When FORCED COOLING OPERATION is set, the operation is controlled as shown below.

OPERATION MODE	Cooling
FAN CONT. MODE	Hi
TIMER MODE	-
SETTING TEMP.	Room Temp is not controlled
SETTING LOUVER	Horizontal (It is changed follow as setting of remote control)
SWING	OFF
ECONOMY	-

- Forced cooling operation is started when press MANUAL AUTO button for 10 seconds or more.
- During the forced cooling operation, it operates regardless of room temperature sensor.
- Operation LED and timer LED blink at the same time during the forced cooling operation.
They blink for 1 second ON and 1 second OFF on both operation LED and timer LED (same as test operation).
- Forced cooling operation is released after 60 minutes of starting operation or pressing MANUAL AUTO button for 3 seconds.

8. COMPRESSOR PREHEATING

When the outdoor heat exchanger temperature is lower than 5°C and the all operation has been stopped for 30 minutes, power is applied to the compressor and the compressor is heated. (By heating the compressor, warm air is quickly discharged when operation is started.) When operation was started and when the outdoor temperature rises to 7°C or greater, preheating is ended.

9. ECONOMY OPERATION

The ECONOMY operation functions by pressing ECONOMY button on the remote controller. At the maximum output, ECONOMY Operation is approximately 70% of normal air conditioner operation for cooling and heating. The ECONOMY operation is almost the same operation as below settings.

Mode	Cooling/ Dry	Heating
Target temperature	Setting temp.+1°C	Setting temp.-1°C

10. POWERFUL OPERATION

POWERFUL OPERATION functions by pressing POWERFUL button on remote control. Indoor unit and outdoor unit will operate at the maximum power.

COMPRESSOR FREQUENCY	Maximum
FAN CONT. MODE	Powerful
SETTING LOUVER	Cooling/ Dry : 3, Heating : 6

Release condition is as follows.

[Cooling / Dry]

Room temperature \leq Set temperature - 1.5°C
or Operation time has passed 20 minutes.

[Heating]

Room temperature \geq Set temperature + 1.5°C
and Operation time has passed 20 minutes.

10.VARIOUS PROTECTIONS

1. DISCHARGE GAS TEMPERATURE OVERRISE PREVENION CONTROL (Discharge release)

Discharge gas temperature sensor (discharge thermistor : outdoor side) will detect discharge gas temperature.

When discharge temperature becomes higher than 104°C, compressor frequency is decreased 20rps, and it continues to decrease the frequency for 20rps every 120 seconds until temperature becomes lower than 101°C.

When discharge temperature becomes lower than 101°C, control of compressor frequency is released.

When discharge temperature becomes higher than 110°C, compressor is stopped and the indoor unit LED starts blinking.

2. CURRENT RELEASE CONTROL

Compressor frequency is controlled so that the outdoor unit input current does not exceed current limit value that was set up with outdoor temperature. Compressor frequency returns to the designated frequency of indoor unit at the time when the frequency becomes lower than the release value.

Current release operation value / Release value

OT : Outdoor temperature

Heating operation

	Control / Release
OT	5.5A / 5.0A
17°C	7.0A / 6.5A
12°C	7.5A / 7.0A
5°C	8.5A / 8.0A

Cooling, Dry operation

	Control / Release
OT	4.0A / 3.5A
50°C	4.0A / 3.5A
46°C	5.0A / 4.5A
40°C	6.0A / 5.5A
12°C	6.0A / 5.5A
2°C	6.0A / 5.5A




WALL-MOUNTED type INVERTER

2 . TROUBLESHOOTING

1. ERROR DISPLAY

1. INDOOR UNIT DISPLAY

When you use a wireless remote control, lamp on the photo detector unit will output error codes by way of blinking patterns.
When you use a wired remote control, error codes will appear on remote control display.
See lamp blinking patterns and error code table.
Error display is displayed only during operation.

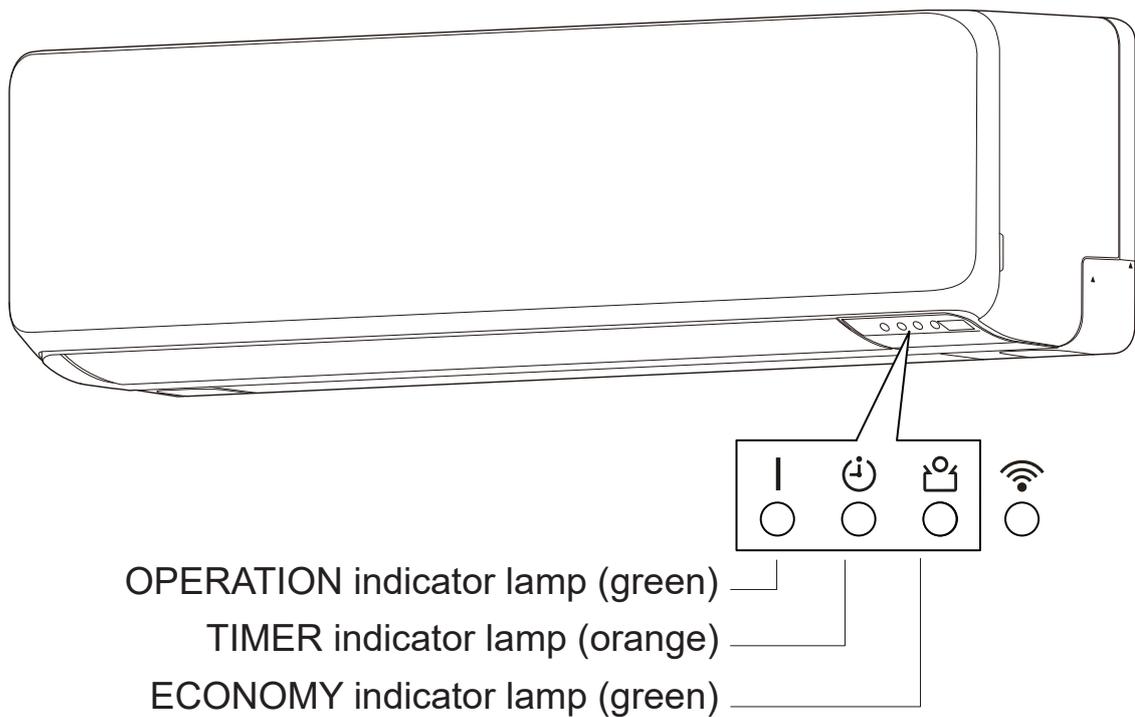

2. ERROR CODE TABLE

Please refer the flashing pattern as follows.

The OPERATION, TIMER and ECONOMY indicators operate as follows according to the error contents.

Error Contents	Indoor Unit Display			Trouble shooting
	OPERATION [I] (Green)	TIMER [⌚] (Orange)	ECONOMY [⌚] (Green)	
Serial communication error	1 times	1 times	Continuous	1
Wired remote control communication error	1 times	2 times	Continuous	2
External communication error	1 times	8 times	Continuous	26,29,30
Indoor unit model information error EEPROM access abnormal	3 times	2 times	Continuous	3
Manual auto switch error	3 times	5 times	Continuous	4
Indoor room thermistor error	4 times	1 times	Continuous	5
Indoor heat Ex. thermistor error	4 times	2 times	Continuous	6
Indoor unit fan motor error	5 times	1 times	Continuous	7
Outdoor unit main PCB error	6 times	2 times	Continuous	8
PFC circuit error	6 times	4 times	Continuous	9
IPM error	6 times	5 times	Continuous	10
Discharge thermistor error	7 times	1 times	Continuous	11
Heat Ex. liquid outlet thermistor error	7 times	3 times	Continuous	12
Outdoor thermistor error	7 times	4 times	Continuous	13
Current sensor error	8 times	4 times	Continuous	14
Over current error	9 times	4 times	Continuous	15
Compressor control error	9 times	5 times	Continuous	16
Outdoor unit fan motor error	9 times	7 times	Continuous	17
4 Way valve error	9 times	9 times	Continuous	18
Discharge temp. error	10 times	1 times	Continuous	19

2. TROUBLESHOOTING WITH ERROR CODE

Troubleshooting 1-1


Serial communication error (Serial reverse transfer error)

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB Outdoor unit fan motor	Detective details: When the indoor unit cannot receive the serial signal from Outdoor unit more than 2minutes after power ON, or the indoor unit cannot receive the serial signal more than 15seconds during normal operation.
--	--

Forecast of cause:

1. Connection failure
2. External cause
3. Main PCB failure
4. Outdoor unit fan motor failure

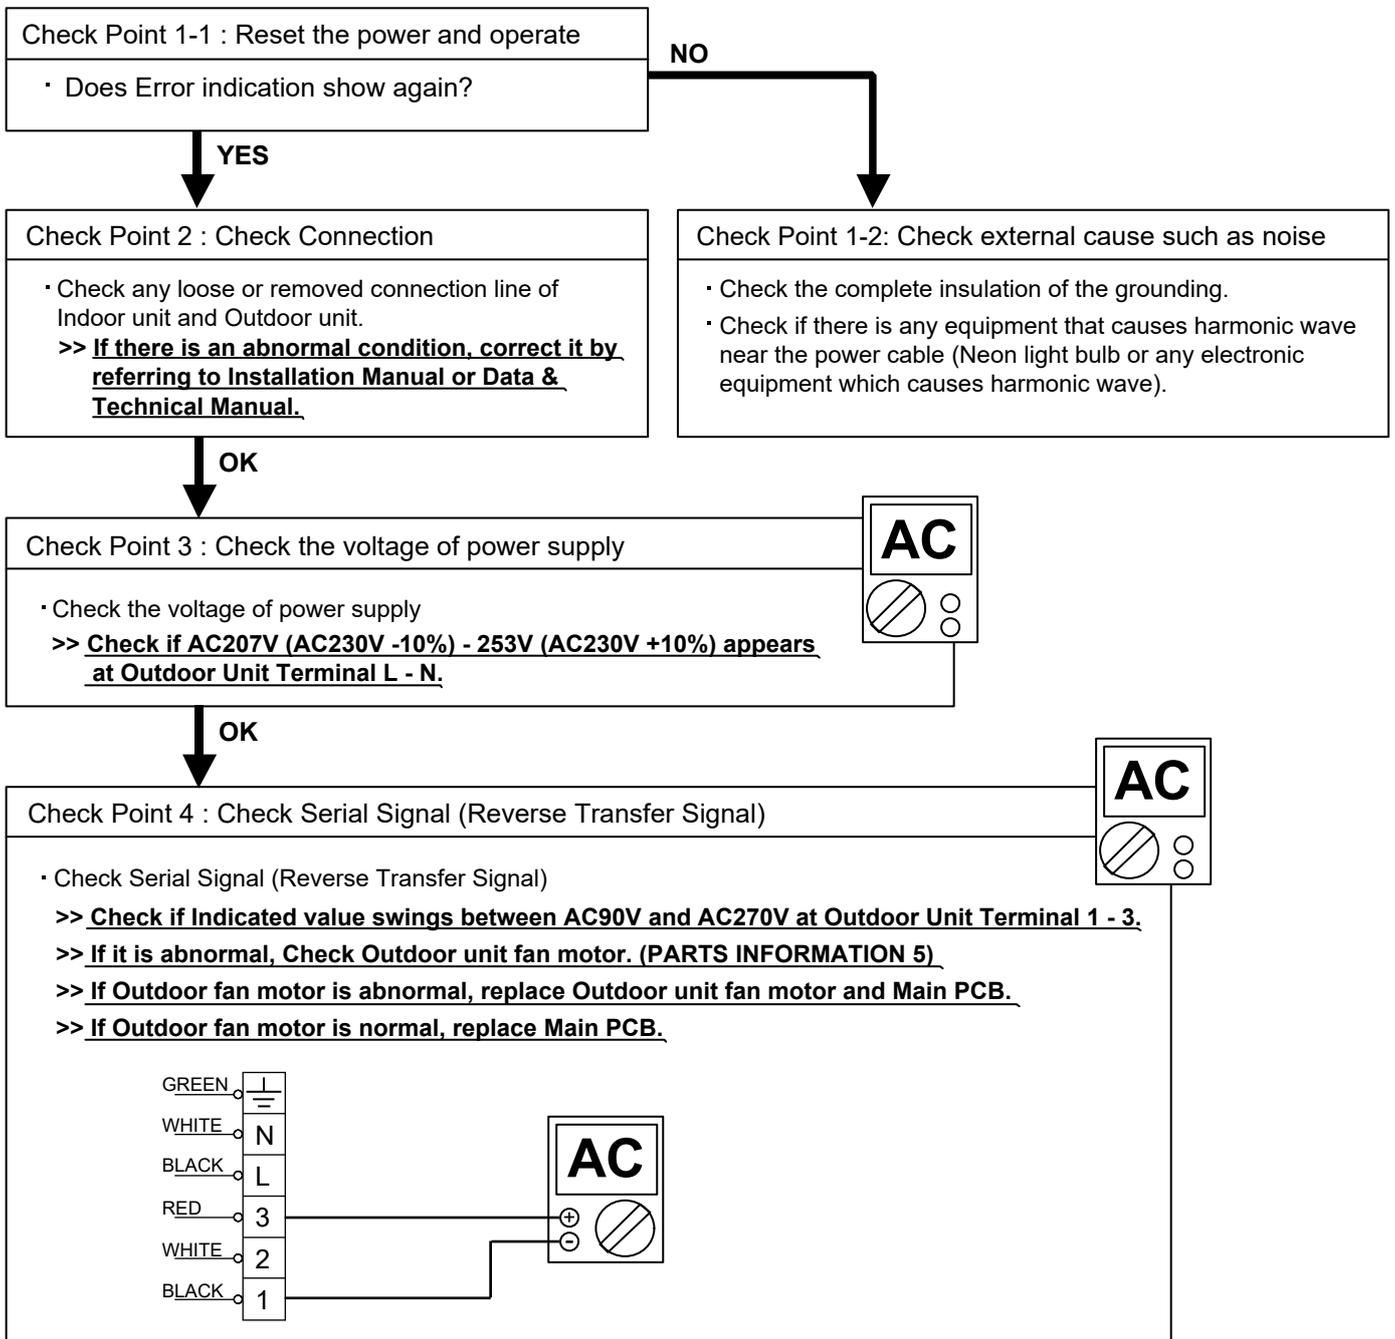

Troubleshooting 1-2


Serial communication error (Serial forward transfer error)

INDOOR UNIT Error Method:

Detective Actuators: Indoor unit Controller PCB Indoor unit Fan motor Outdoor unit Main PCB	Detective details: When the outdoor unit cannot receive the serial signal from Indoor unit more than 10seconds.
--	--

Forecast of cause:

1. Connection failure
2. External cause
3. Controller PCB failure
4. Indoor unit fan motor failure
5. Outdoor unit Main PCB

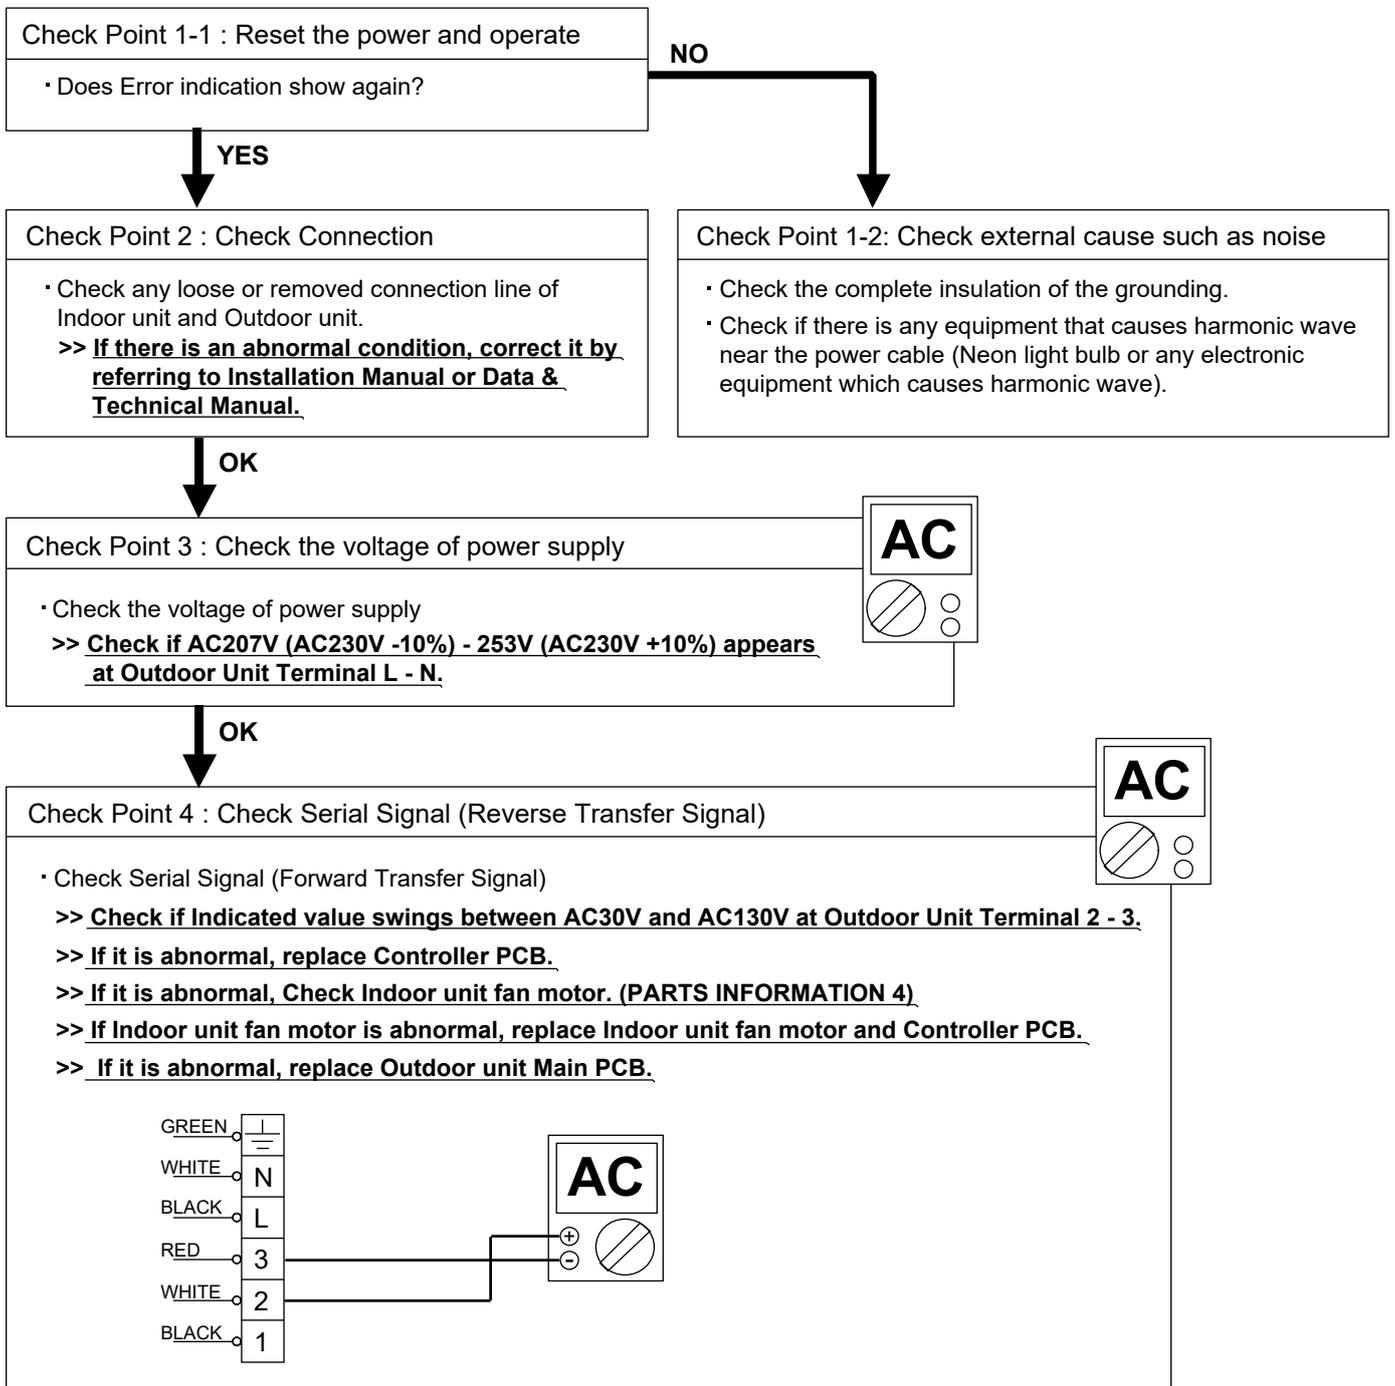

Troubleshooting 2

Remote control communication error

INDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB Wired remote control	Detective details: When the indoor unit cannot receive the signal from Wired Remote Control more than 1minute during normal operation.
---	--

Forecast of cause:

1. Terminal connection abnormal
2. Wired remote control failure
3. Controller PCB failure

Check Point 1 : Check the connection of terminal
<u>After turning off the power, check & correct the followings.</u> · Check the connection of terminal between remote control and Indoor unit, and check if there is a disconnection of the cable.



Check Point 2 : Check remote control and controller PCB	
· Check Voltage at CNC01 (terminal 1-3) of UTY-XCBXZ2 (Communication kit). (Power supply to Remote Control)	
>> If it is DC13V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control	
>> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB	
▶ <u>Upon correcting the removed connector or mis-wiring, reset the power.</u>	

Wired remote control is unable to connect to ASHG07/09/12KPCA.

Troubleshooting 3


Indoor unit main PCB error

INDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB	Detective details: When power is on and there is some below case. 1. When model information of EEPROM is incorrect. 2. When the access to EEPROM failed.
--	---

Forecast of cause:

1. External cause
2. Defective connection of electric components
3. Controller PCB failure

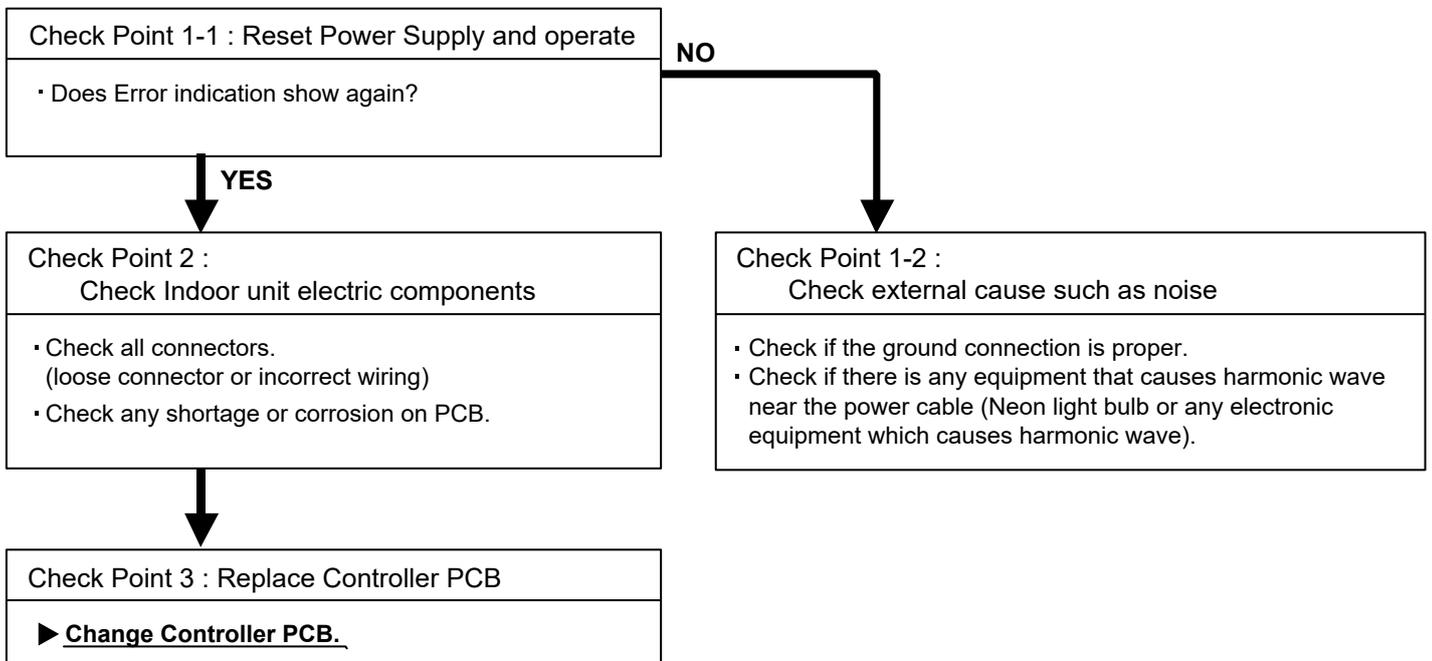

Note : EEPROM

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

Troubleshooting 4


Manual auto switch error

INDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB Indicator PCB Manual auto switch	Detective details: When the Manual Auto Switch becomes ON for consecutive 60 or more seconds.
--	---

Forecast of cause :

1. Manual auto switch failure
2. Controller PCB and Indicator PCB failure

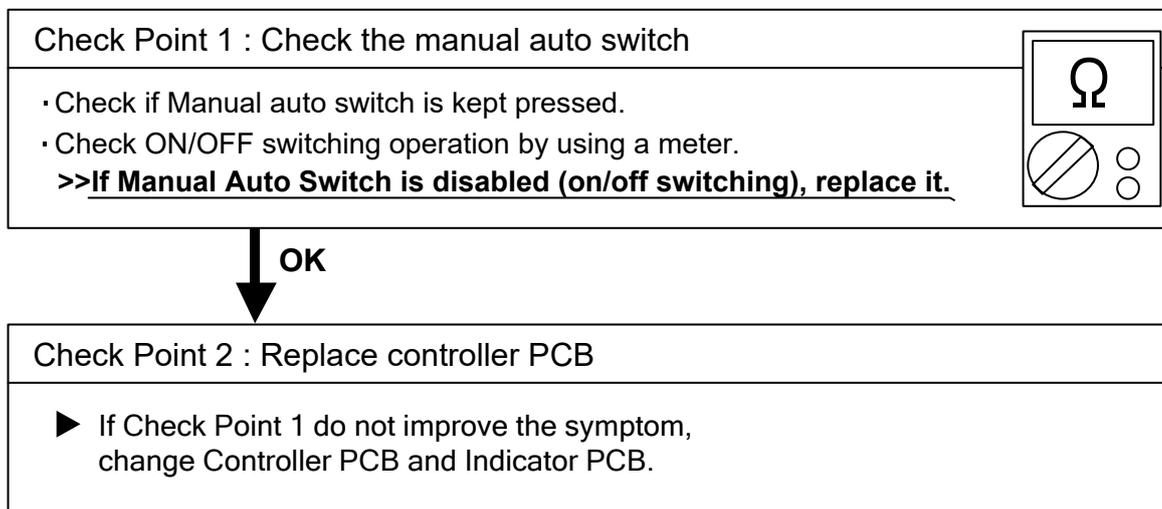

Troubleshooting 5

Room temperature sensor error

INDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB Room temperature thermistor	Detective details: When Room Temperature Thermistor open or short-circuit is detected.
--	--

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Controller PCB failure

Check Point 1 : Check connection of Connector
<ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if thermistor cable is open. <p>>> Upon correcting the removed connector or mis-wiring, reset the power.</p>



Check Point 2 : Remove connector and check Thermistor resistance value									
Thermistor Characteristics (Approx. value)									
Temperature	-10°C	-5°C	0°C	5°C	10°C	15°C	20°C	25°C	
Resistance Value (kΩ)	55.46	42.36	32.67	25.39	19.91	15.71	12.5	10.0	
Temperature	30°C	35°C	40°C	45°C					
Resistance Value (kΩ)	8.051	6.52	5.316	4.354					
► If Thermistor is either open or shorted, replace it and reset the power.									



Check Point 3 : Check voltage of Controller PCB (DC5.0V)		
Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)		
THERMISTOR (PIPE) THERMISTOR (ROOM TEMP.)	CN1	
► If the voltage does not appear, replace controller PCB.		

Troubleshooting 6

Indoor unit heat-exchanger sensor error

INDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB Heat Ex. temperature thermistor	Detective details: When heat-exchanger temperature thermistor open or short-circuit is detected.
--	--

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Controller PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature	-10°C	-5°C	0°C	5°C	10°C	20°C
Resistance Value (kΩ)	295.1	223.3	170.7	131.4	102.1	62.9

Temperature	30°C	40°C	50°C	60°C	63°C
Resistance Value (kΩ)	39.78	25.8	17.11	11.6	10.36

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Controller PCB (DC5.0V)

Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)

THERMISTOR (PIPE)	
	BLACK 1 1
	BLACK 2 2
	BLACK 3 3
	BLACK 4 4
THERMISTOR (ROOM TEMP.)	CN1

► If the voltage does not appear, replace controller PCB.

Troubleshooting 7


Indoor unit fan motor error

INDOOR UNIT Error Method:

Detective Actuators: Indoor unit Controller PCB Indoor unit Fan motor	Detective details: When the condition that actual frequency of Indoor Fan is below 1/3 of target frequency is continued more than 56 seconds.
---	--

Forecast of cause:

1. Fan rotation failure
2. Fan motor winding open
3. Motor protection by surrounding temperature rise
4. Control PCB failure
5. Indoor unit fan motor failure

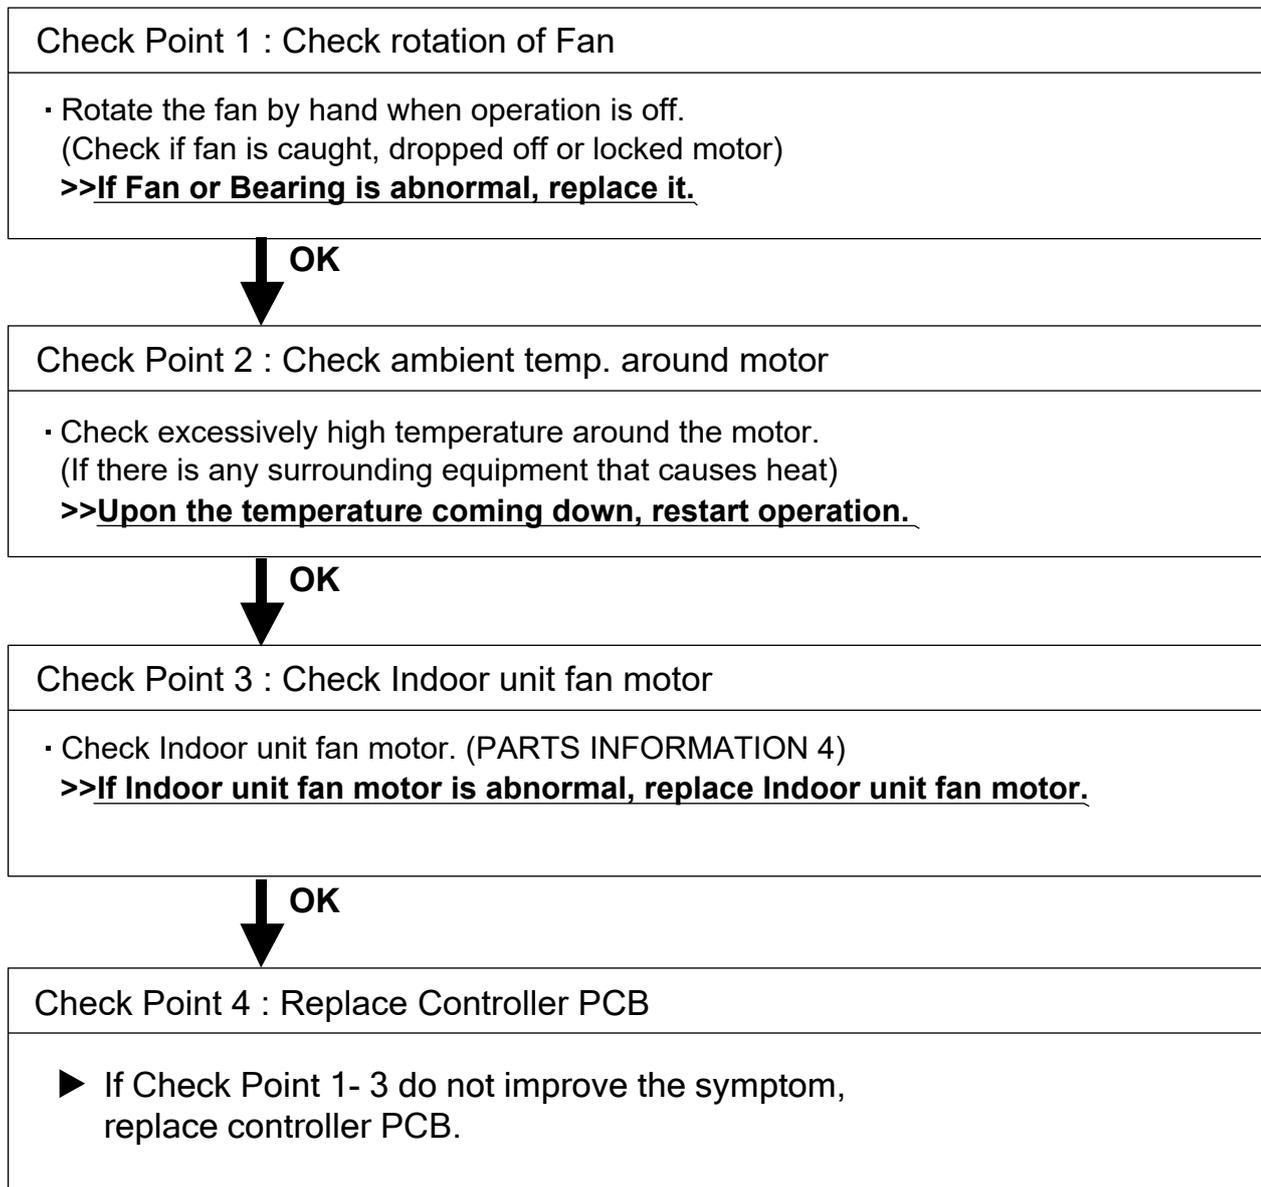

Troubleshooting 8


Outdoor unit main PCB error

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB	Detective details: Access to EEPROM failed due to some cause after outdoor unit started.
--	--

Forecast of cause:

1. External cause (Noise, temporary open, voltage drop)
2. Main PCB failure

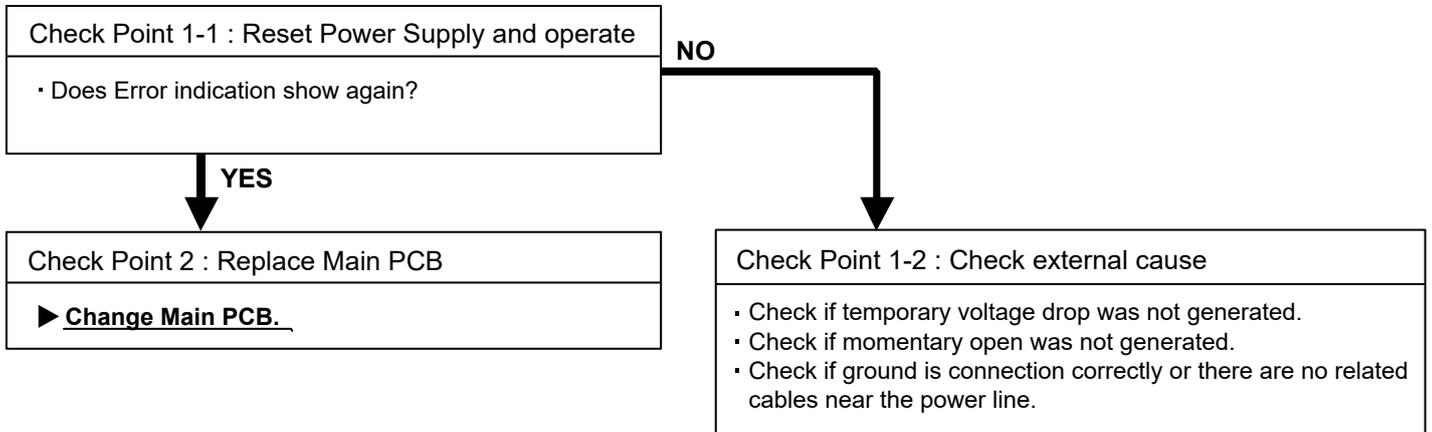

Troubleshooting 9


PFC circuit error

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB	Detective details: When inverter output DC voltage is higher than 415V for over 3 seconds, the compressor stops. If the same operation is repeated 5 times, the compressor stops permanently.
--	--

Forecast of cause :

1. External cause
2. Connector connection failure
3. Main PCB failure

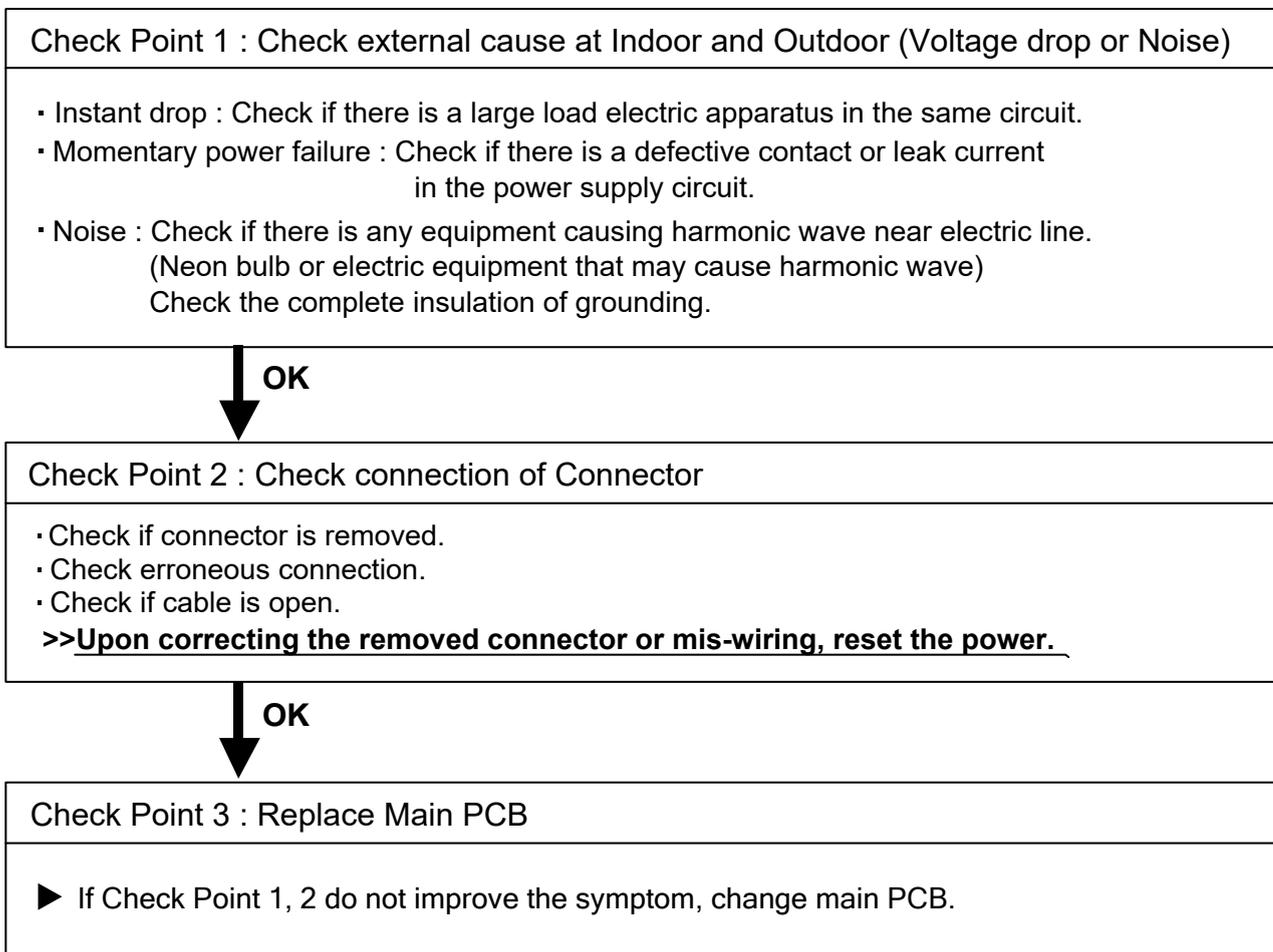

Troubleshooting 10


IPM error

OUTDOOR UNIT Error Method:

Detective actuators:	Detective details:
Outdoor unit main PCB Compressor	① When more than normal operating current to IPM in Main PCB flows, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.

Forecast of cause :

1. Defective connection of electric components
2. Outdoor Fan Operation failure
3. Outdoor Heat Exchanger clogged
4. Compressor failure
5. Main PCB failure

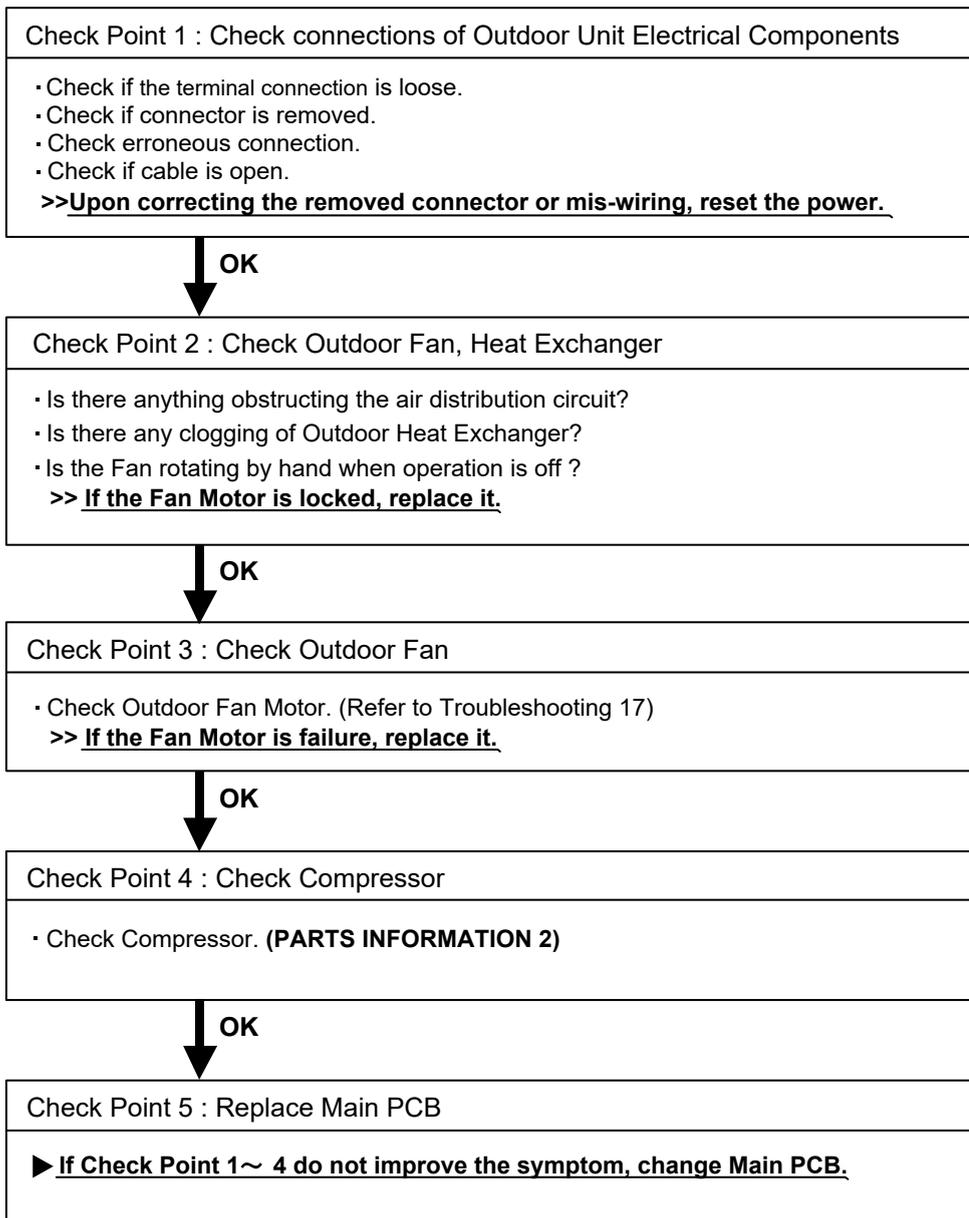

Troubleshooting 11

Discharge thermistor error

OUTDOOR UNIT Error Method:

<p>Detective actuators: Outdoor unit main PCB Discharge pipe temperature thermistor</p>	<p>Detective details: When Discharge pipe temperature thermistor open or short-circuit is detected at power ON or while running the compressor.</p>
--	--

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Main PCB failure

<p>Check Point 1 : Check connection of Connector</p> <ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if thermistor cable is open. <p>>>Upon correcting the removed connector or mis-wiring, reset the power.</p>



<p>Check Point 2 : Remove connector and check Thermistor resistance value</p>										
<p>Thermistor Characteristics (Approx. value)</p>										
Temperature	-10°C	-5°C	0°C	5°C	10°C	20°C	30°C			
Resistance Value (kΩ)	286.3	218.6	168.6	130.9	102.5	64.22	41.33			
Temperature	40°C	50°C	60°C	70°C	80°C	90°C	100°C	110°C	120°C	
Resistance Value (kΩ)	27.26	18.40	12.68	8.909	6.375	4.639	3.430	2.573	1.956	
<p>► If Thermistor is either open or shorted, replace it and reset the power.</p>										



<p>Check Point 3 : Check voltage of Main PCB (DC5.0V)</p>	
<p>Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)</p>	
	<p>► If the voltage does not appear, replace main PCB.</p>

Troubleshooting 12

Outdoor unit heat-exchanger sensor error

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB Heat exchanger temperature thermistor	Detective details: When Heat exchanger temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Ω

Thermistor Characteristics (Approx. value)

Temperature	-10°C	-5°C	0°C	5°C	10°C	20°C	30°C	40°C	50°C
Resistance Value (kΩ)	27.21	20.80	16.05	12.47	9.775	6.129	3.947	2.606	1.759

Temperature	60°C	70°C	80°C
Resistance Value (kΩ)	1.213	0.8531	0.6115

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

DC

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

THERMISTOR (PIPE)	BLACK	1	1	P1
	BLACK	2	2	
	BLACK	3	3	
	BLACK	4	4	
THERMISTOR (DISCHARGE)				
THERMISTOR (OUTDOOR)				
	BLACK	1	1	P5
	BLACK	2	2	
	BLACK	3	3	

► If the voltage does not appear, replace main PCB.

Troubleshooting 13

Outdoor thermistor error

OUTDOOR UNIT Error Method:

<p>Detective Actuators: Outdoor unit main PCB Outdoor temperature thermistor</p>	<p>Detective details: When Outdoor temperature thermistor open or short-circuit is detected at power ON or while running the compressor.</p>
---	---

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Main PCB failure

<p>Check Point 1 : Check connection of Connector</p> <ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if thermistor cable is open. <p>>>Upon correcting the removed connector or mis-wiring, reset the power.</p>



<p>Check Point 2 : Remove connector and check Thermistor resistance value</p> <p>Thermistor Characteristics (Approx. value)</p> <table border="1" style="width: 100%;"> <tr> <td>Temperature</td> <td>-20°C</td> <td>-15°C</td> <td>-10°C</td> <td>-5°C</td> <td>0°C</td> <td>5°C</td> <td>10°C</td> </tr> <tr> <td>Resistance Value (kΩ)</td> <td>109.0</td> <td>80.56</td> <td>60.23</td> <td>45.40</td> <td>34.57</td> <td>26.53</td> <td>20.56</td> </tr> </table> <table border="1" style="width: 100%;"> <tr> <td>Temperature</td> <td>15°C</td> <td>20°C</td> <td>25°C</td> <td>30°C</td> <td>35°C</td> <td>40°C</td> <td>45°C</td> <td>50°C</td> <td>55°C</td> </tr> <tr> <td>Resistance Value (kΩ)</td> <td>16.04</td> <td>12.26</td> <td>10.00</td> <td>7.978</td> <td>6.408</td> <td>5.184</td> <td>4.216</td> <td>3.451</td> <td>2.841</td> </tr> </table> <p>► If Thermistor is either open or shorted, replace it and reset the power.</p>	Temperature	-20°C	-15°C	-10°C	-5°C	0°C	5°C	10°C	Resistance Value (kΩ)	109.0	80.56	60.23	45.40	34.57	26.53	20.56	Temperature	15°C	20°C	25°C	30°C	35°C	40°C	45°C	50°C	55°C	Resistance Value (kΩ)	16.04	12.26	10.00	7.978	6.408	5.184	4.216	3.451	2.841	
Temperature	-20°C	-15°C	-10°C	-5°C	0°C	5°C	10°C																														
Resistance Value (kΩ)	109.0	80.56	60.23	45.40	34.57	26.53	20.56																														
Temperature	15°C	20°C	25°C	30°C	35°C	40°C	45°C	50°C	55°C																												
Resistance Value (kΩ)	16.04	12.26	10.00	7.978	6.408	5.184	4.216	3.451	2.841																												



<p>Check Point 3 : Check voltage of Main PCB (DC5.0V)</p> <p>Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> </div> <p>► If the voltage does not appear, replace main PCB.</p>	
---	--

Troubleshooting 14


Current sensor error

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB	Detective details: When Input Current Sensor has detected 0A, while Inverter Compressor is operating at higher than 56rps, after 1minute upon starting the Compressor. (Except during the defrost operation)
--	--

Forecast of cause :

1. Defective connection of electric components
2. External cause
3. Main PCB failure

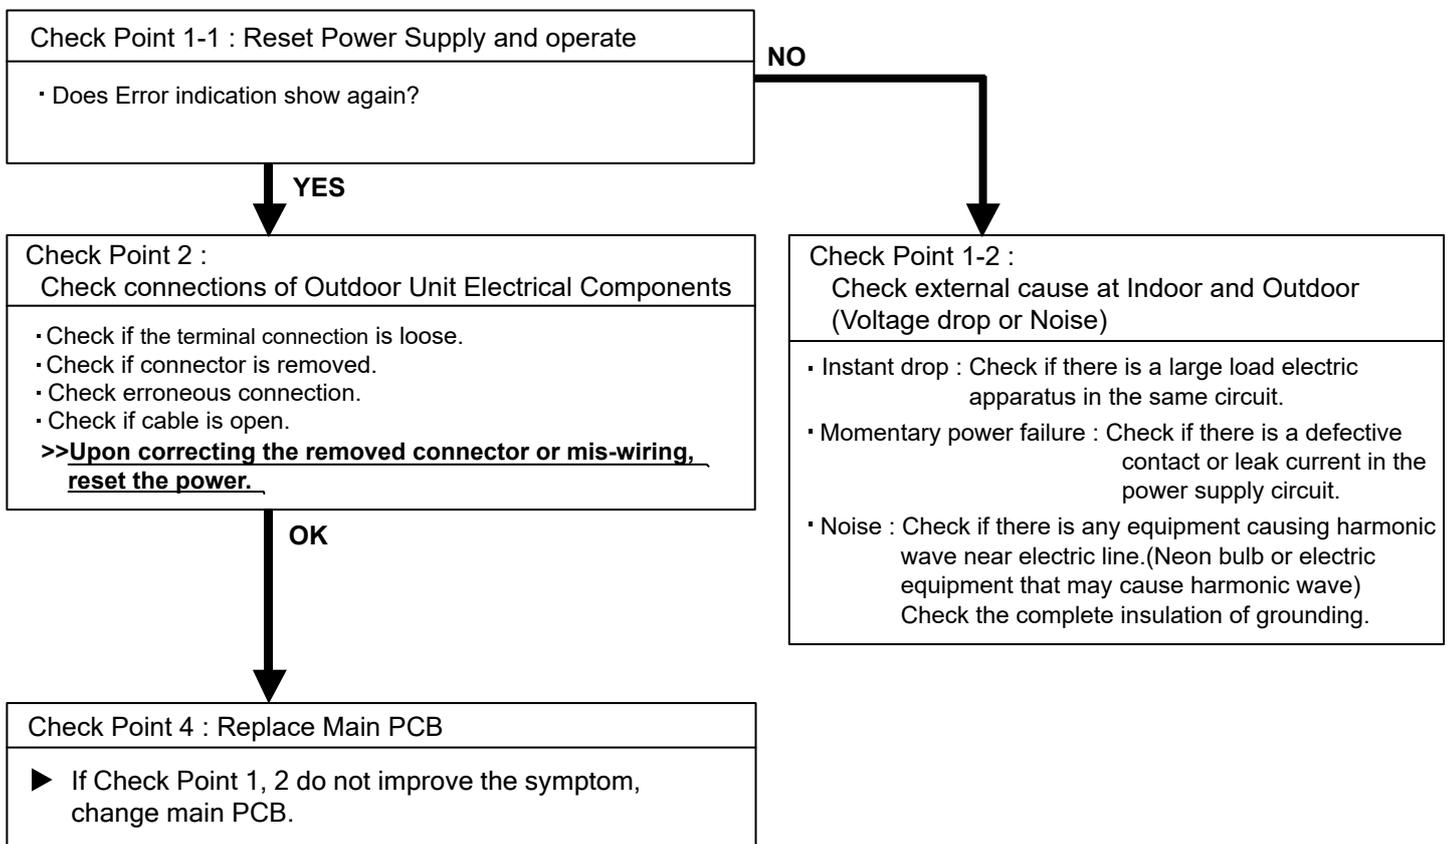

Troubleshooting 15


Trip detection

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit main PCB Compressor	Detective details: ▪ "Protection stop by overcurrent generation after inverter compressor start processing completed" generated consecutively 10 times. * The number of generations is reset if the start-up of the compressor succeeds.
--	--

Forecast of cause :

1. Outdoor unit fan operation defective, foreign matter on heat-exchanger, excessive rise of ambient temperature
2. Inverter PCB failure
3. Inverter compressor failure (lock, winding short)

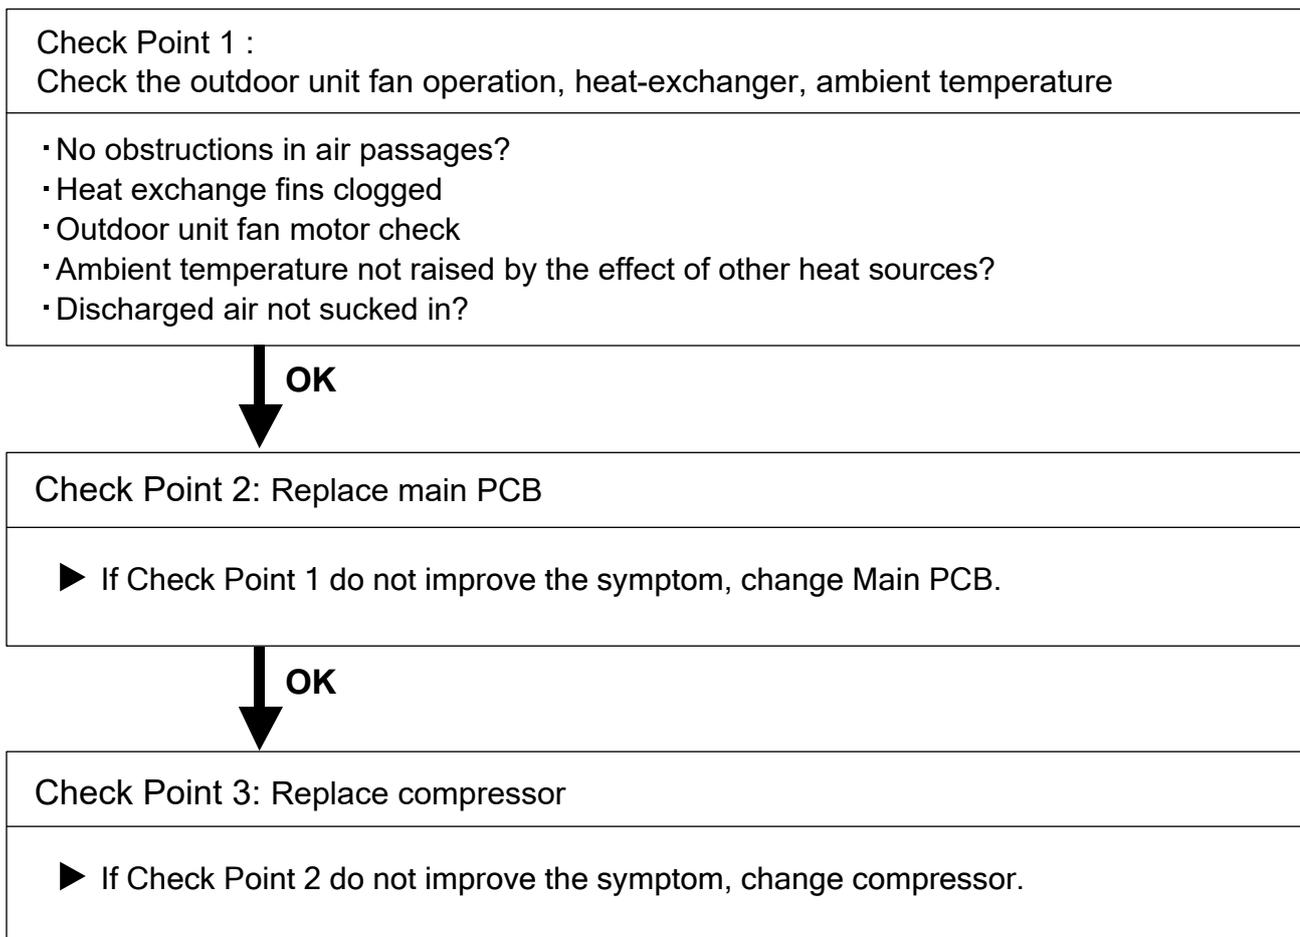

Troubleshooting 16


Compressor motor control error

OUTDOOR UNIT Error Method:

Detective actuators: Outdoor unit Main PCB Compressor	Detective details: ① If the detected rotor location is out of phase with actual rotor location more than 90°, the compressor stops. After the compressor restarts, if the same operation is repeated ② within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
--	---

Forecast of cause :

1. Defective connection of electric components
2. Main PCB failure
3. Compressor failure

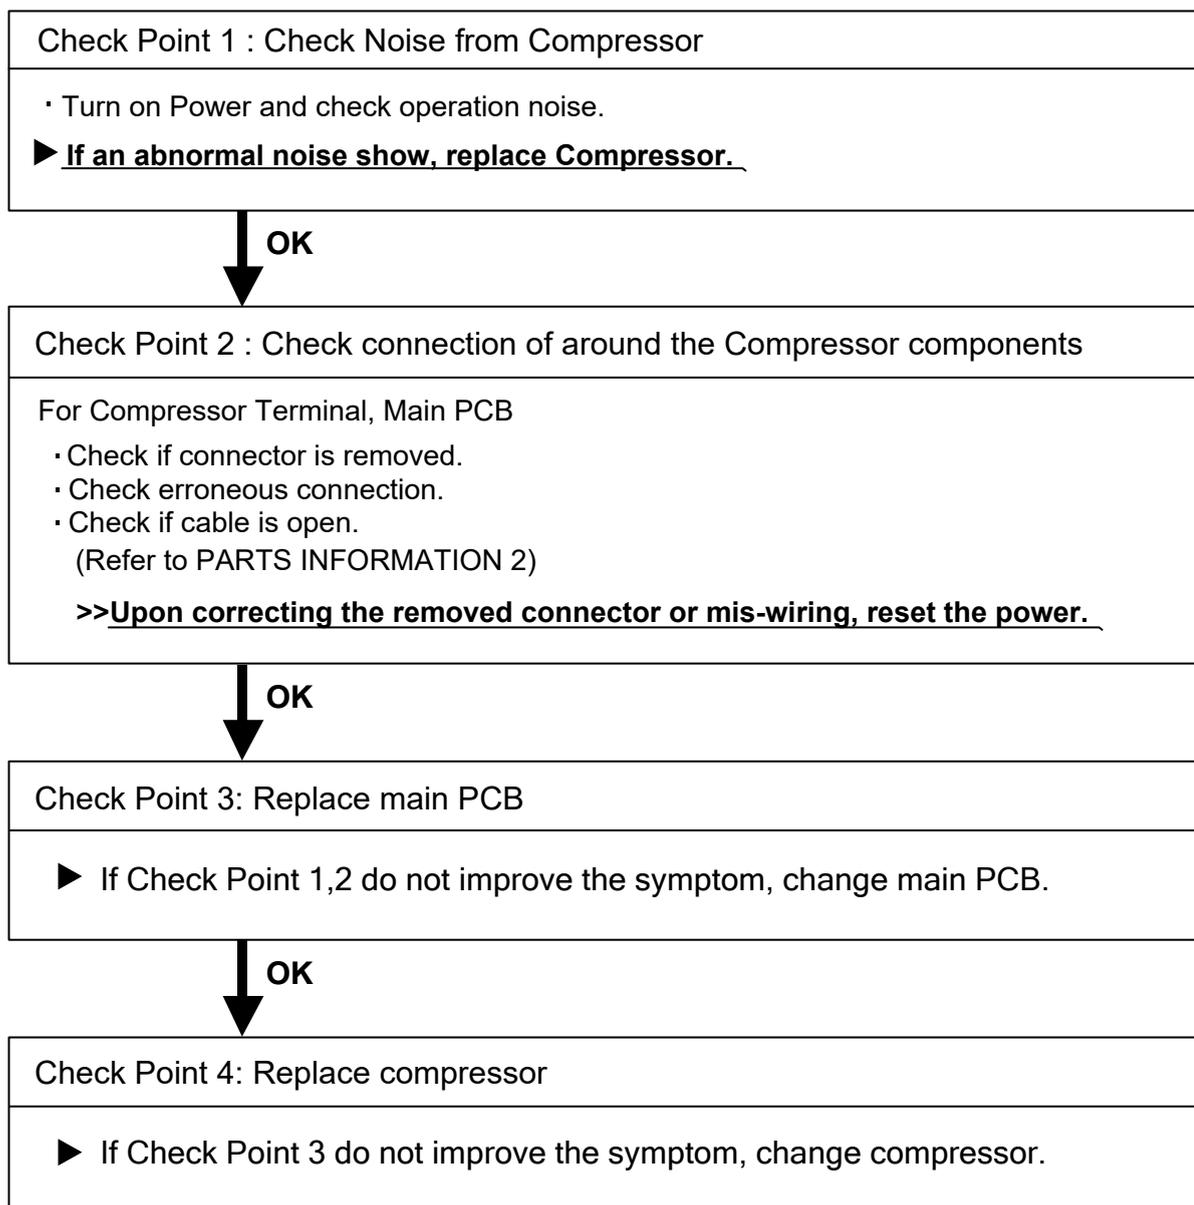

Troubleshooting 17


Outdoor unit fan motor error

OUTDOOR UNIT Error Method:

<p>Detective actuators:</p> <p>Outdoor unit main PCB Outdoor unit fan motor</p>	<p>Detective details:</p> <p>① When outdoor fan rotation speed is less than 100rpm in 20 seconds after fan motor starts, fan motor stops. ② After fan motor restarts, if the same operation within 60sec is repeated 3 times in a row, compressor and fan motor stops. ③ If ① and ② repeats 5 times in a row, compressor and fan motor stops permanently.</p>
--	--

Forecast of cause:

1. Fan rotation failure
2. Motor protection by surrounding temperature rise
3. Main PCB failure
4. Outdoor unit fan motor

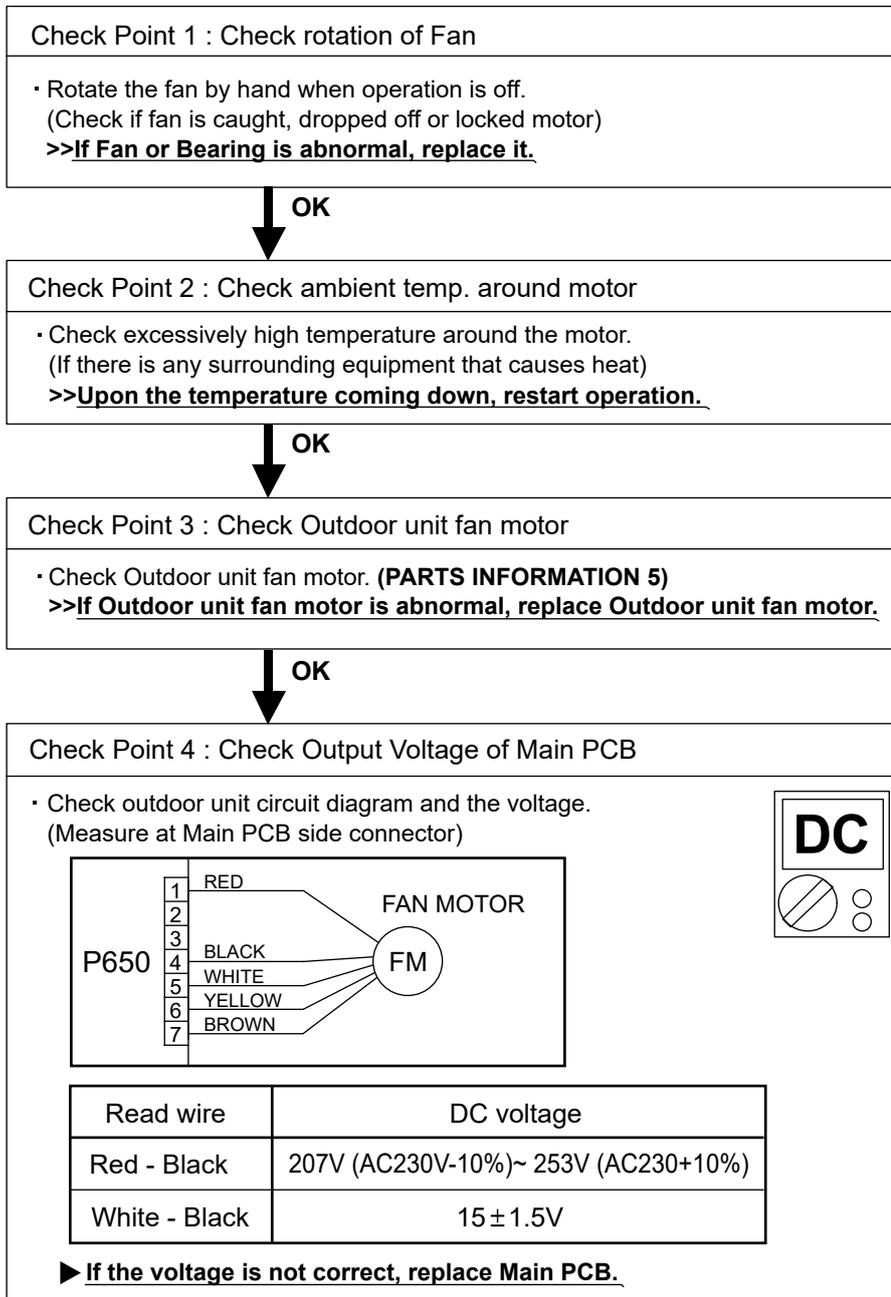

Troubleshooting 18

4-way valve error


INDOOR UNIT Error Method:

OUTDOOR UNIT Error Method:

Detective actuators: Indoor unit controller PCB Heat Ex. temperature thermistor Room temperature thermistor 4-way valve	Detective details: When the indoor heat exchanger temperature is compared with the room temperature, and either following condition is detected continuously two times, the compressor stops. <ul style="list-style-type: none">• Cooling or Dry operation [Indoor heat exchanger temp.] - [Room temp.] > 10degC• Heating operation [Indoor heat exchanger temp.] - [Room temp.] < - 10degC If the same operation is repeated 5 times, the compressor stops permanently.
--	---

Forecast of cause :

1. Connector connection failure
2. Thermistor failure
3. Coil failure
4. 4-way valve failure
5. Controller PCB failure

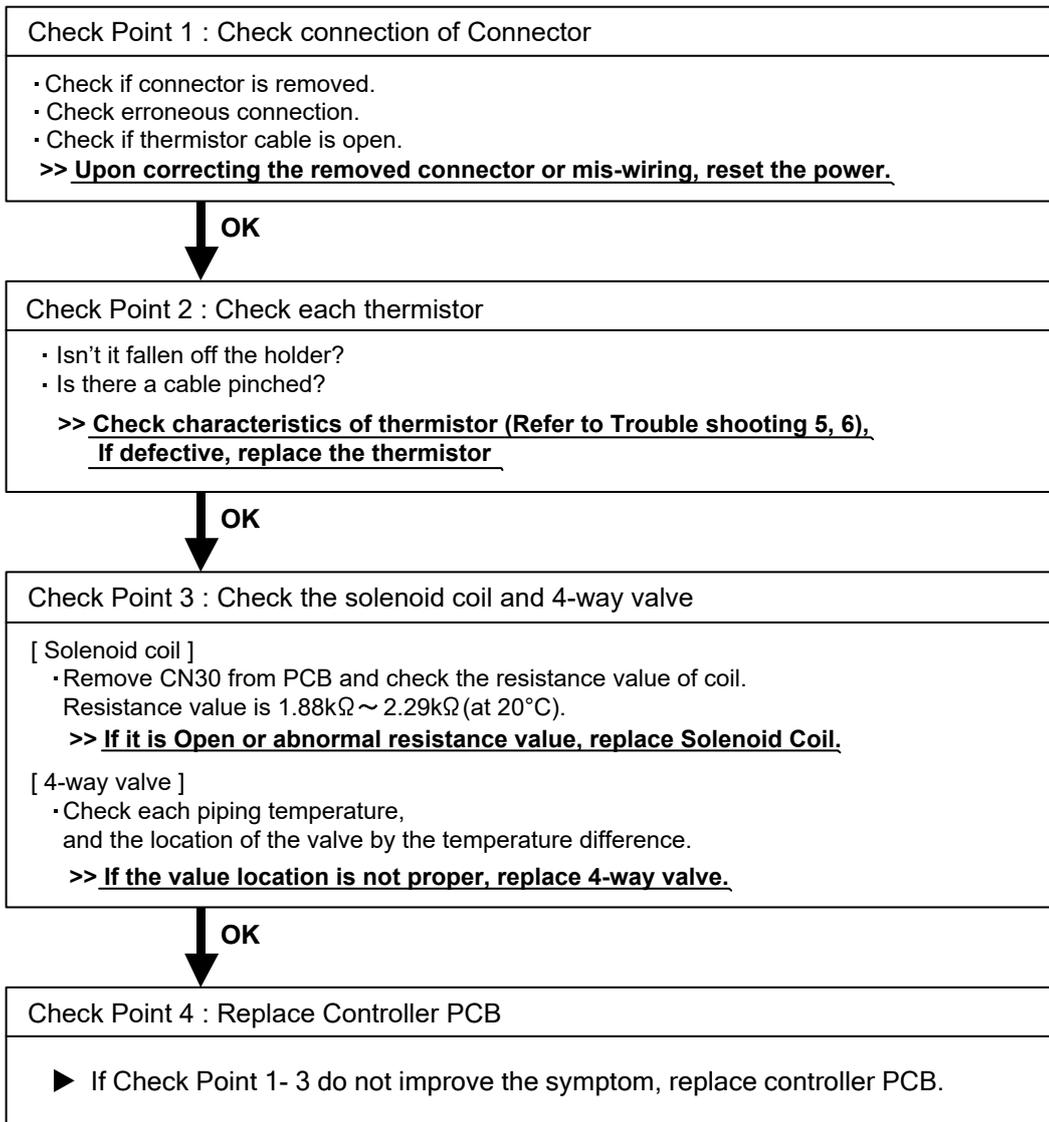

Troubleshooting 19

Discharge temperature error


OUTDOOR UNIT Error Method:

<p>Detective actuators:</p> <p>Outdoor unit Main PCB Discharge temperature thermistor</p>	<p>Detective details:</p> <ul style="list-style-type: none"> "Protection stop by "discharge temperature $\geq 110\text{degC}$ during compressor operation"" generated 2 times within 24 hours.
--	---


Forecast of cause :

1. 2,3-way valve not opened
2. EEV defective, strainer clogged
3. Outdoor unit operation failure, foreign matter on heat exchanger
4. Discharge temperature thermistor failure
5. Insufficient refrigerant
6. Main PCB failure

Cooling operation

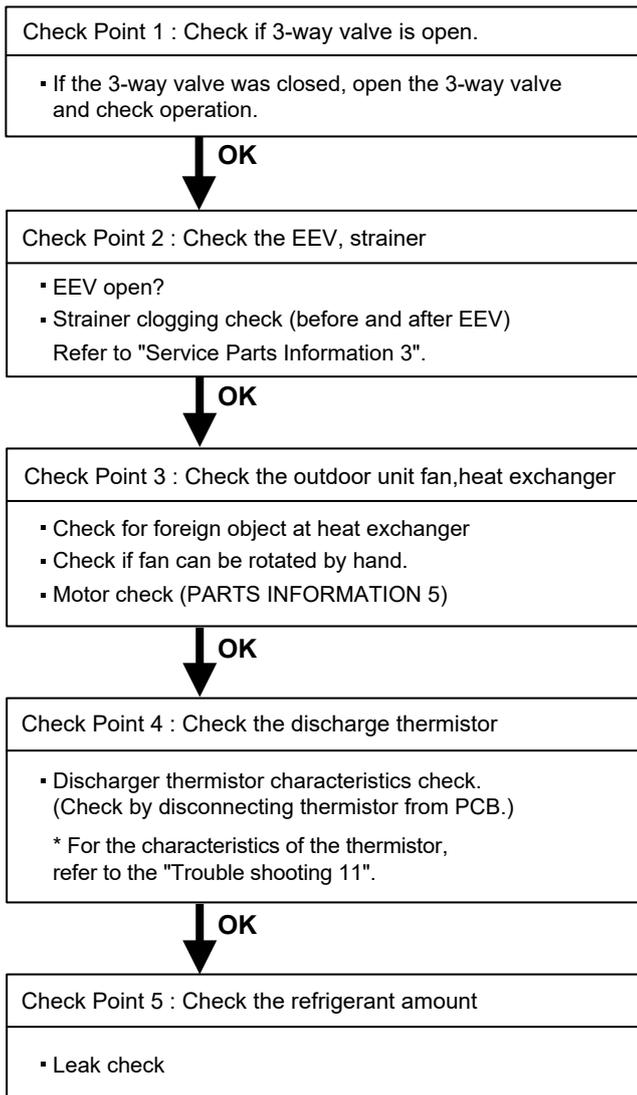

Heating operation

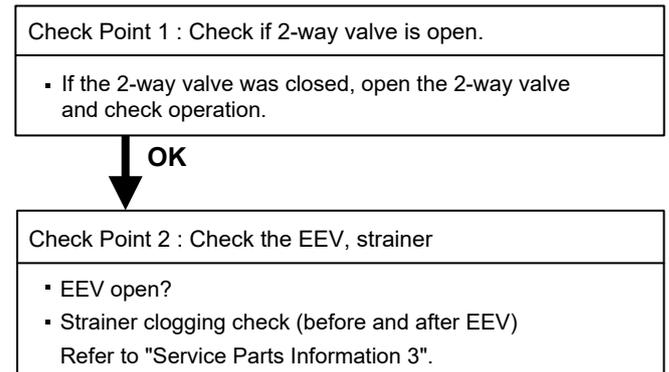


3. TROUBLESHOOTING WITH NO ERROR CODE

Troubleshooting 20

Indoor unit - No power

Forecast of cause:

1. Power supply failure
2. External cause
3. Electrical components defective

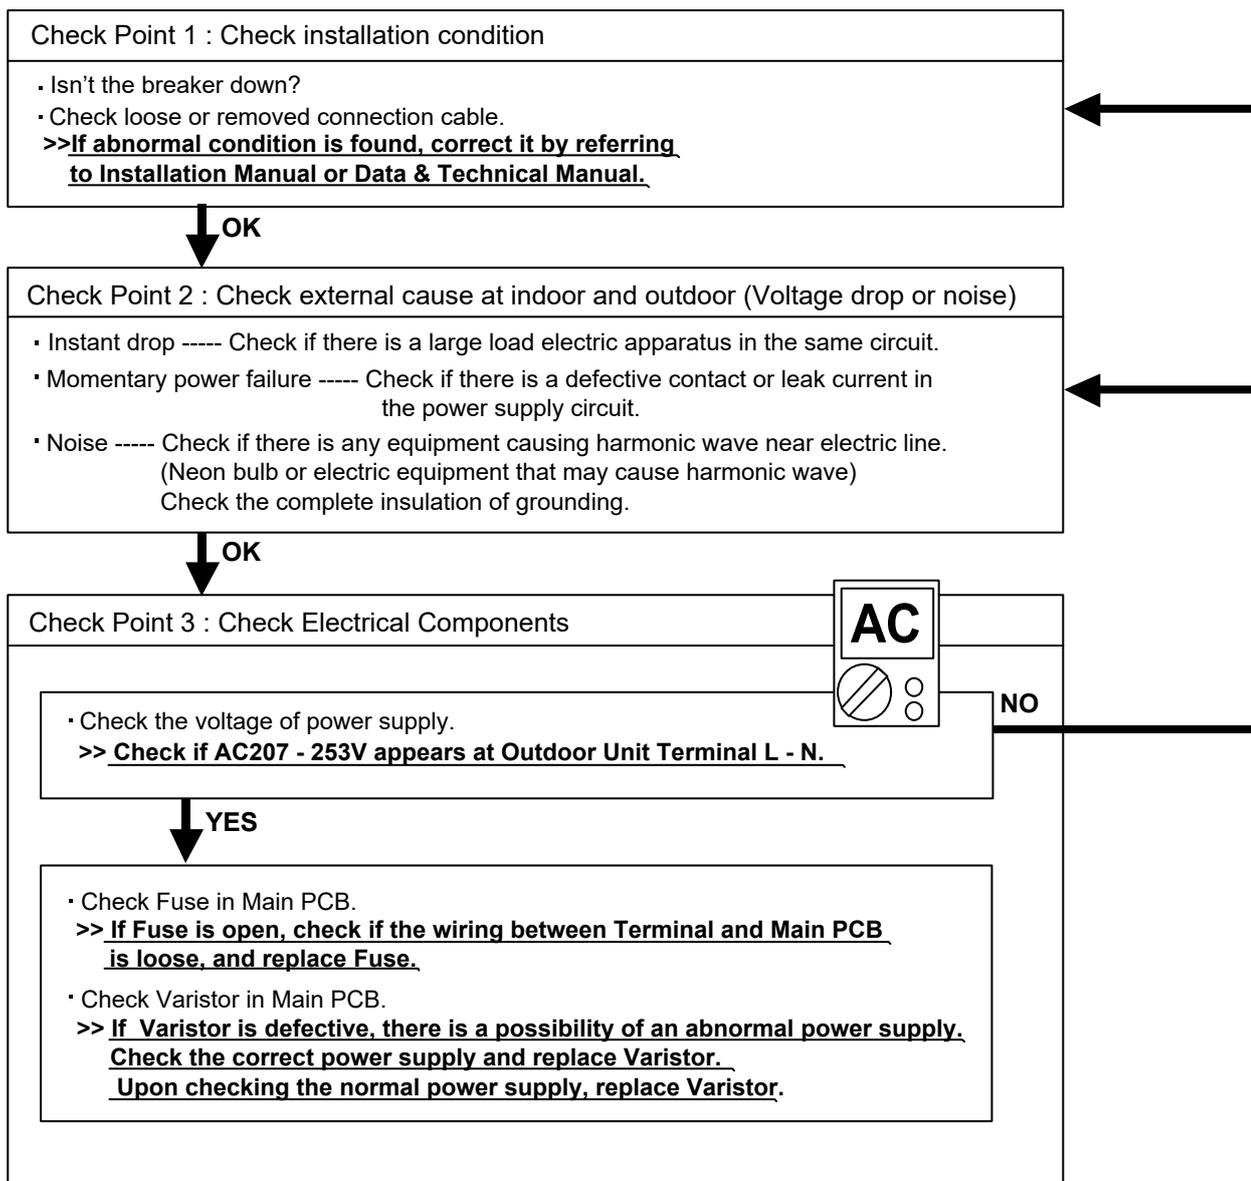


Troubleshooting 21

Outdoor unit - No power

Forecast of cause:

1. Power supply failure
2. External cause
3. Electrical Components defective

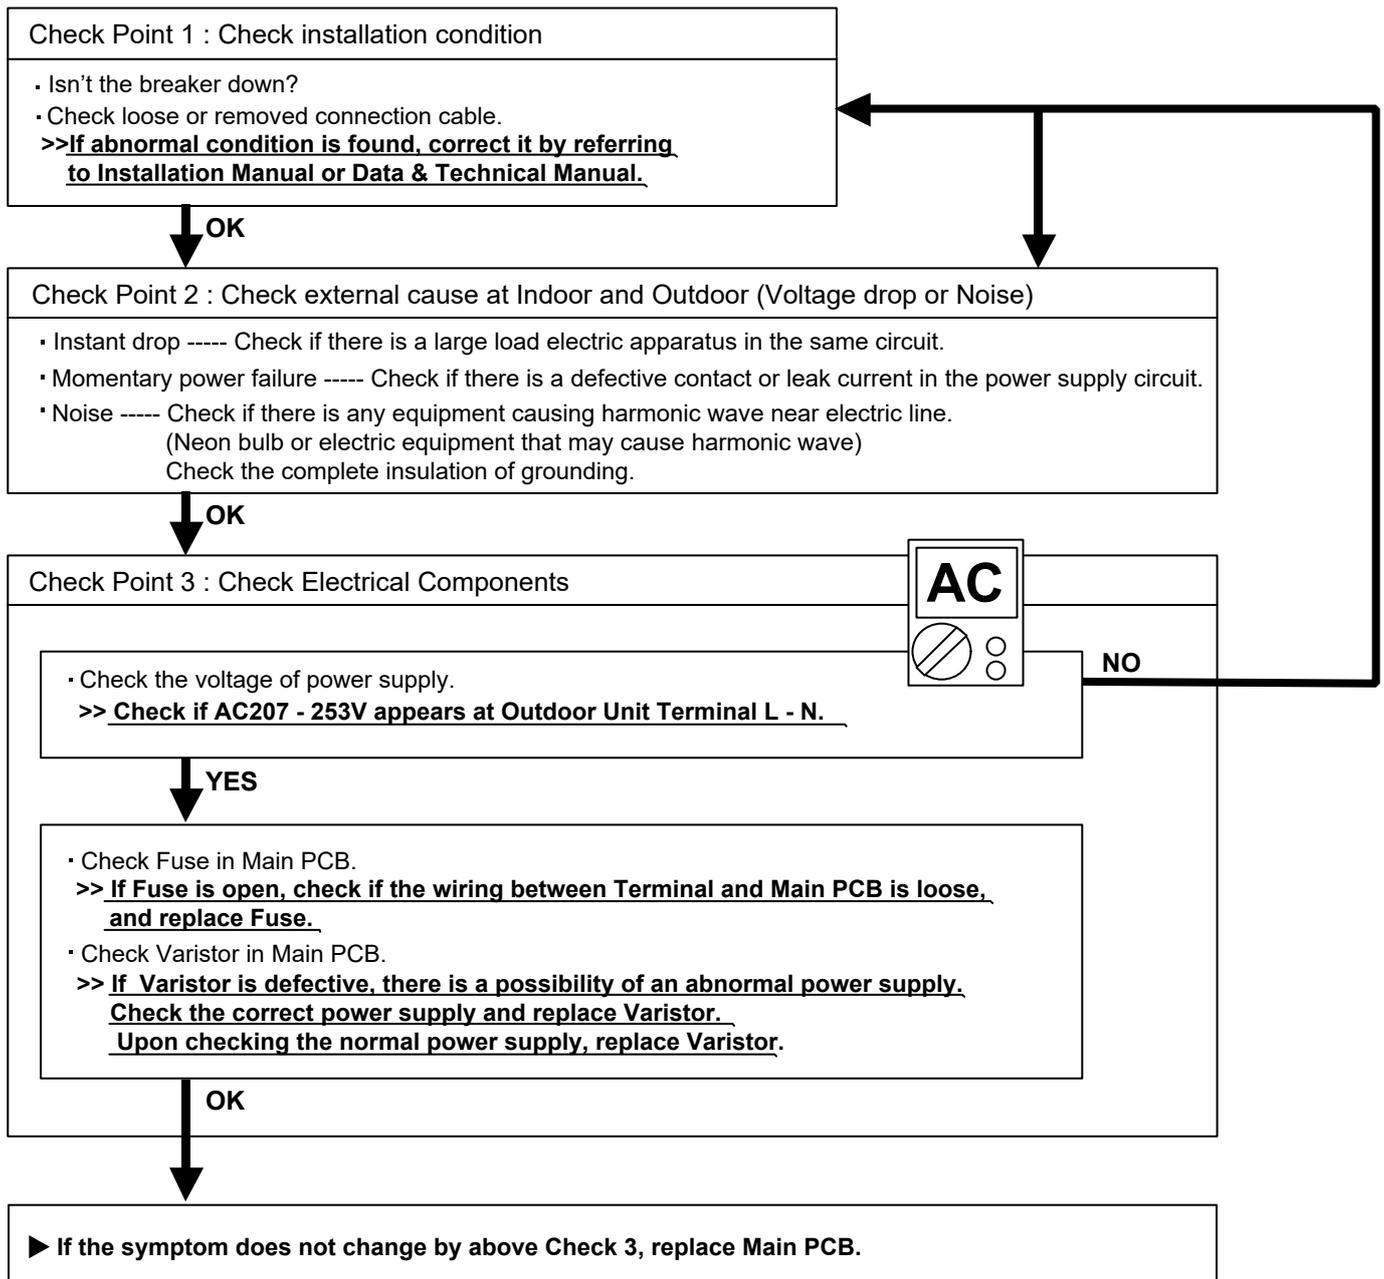


Troubleshooting 22

No operation (Power is ON)

Forecast of cause:

1. Setting/ Connection failure
2. External cause
3. Electrical component defective

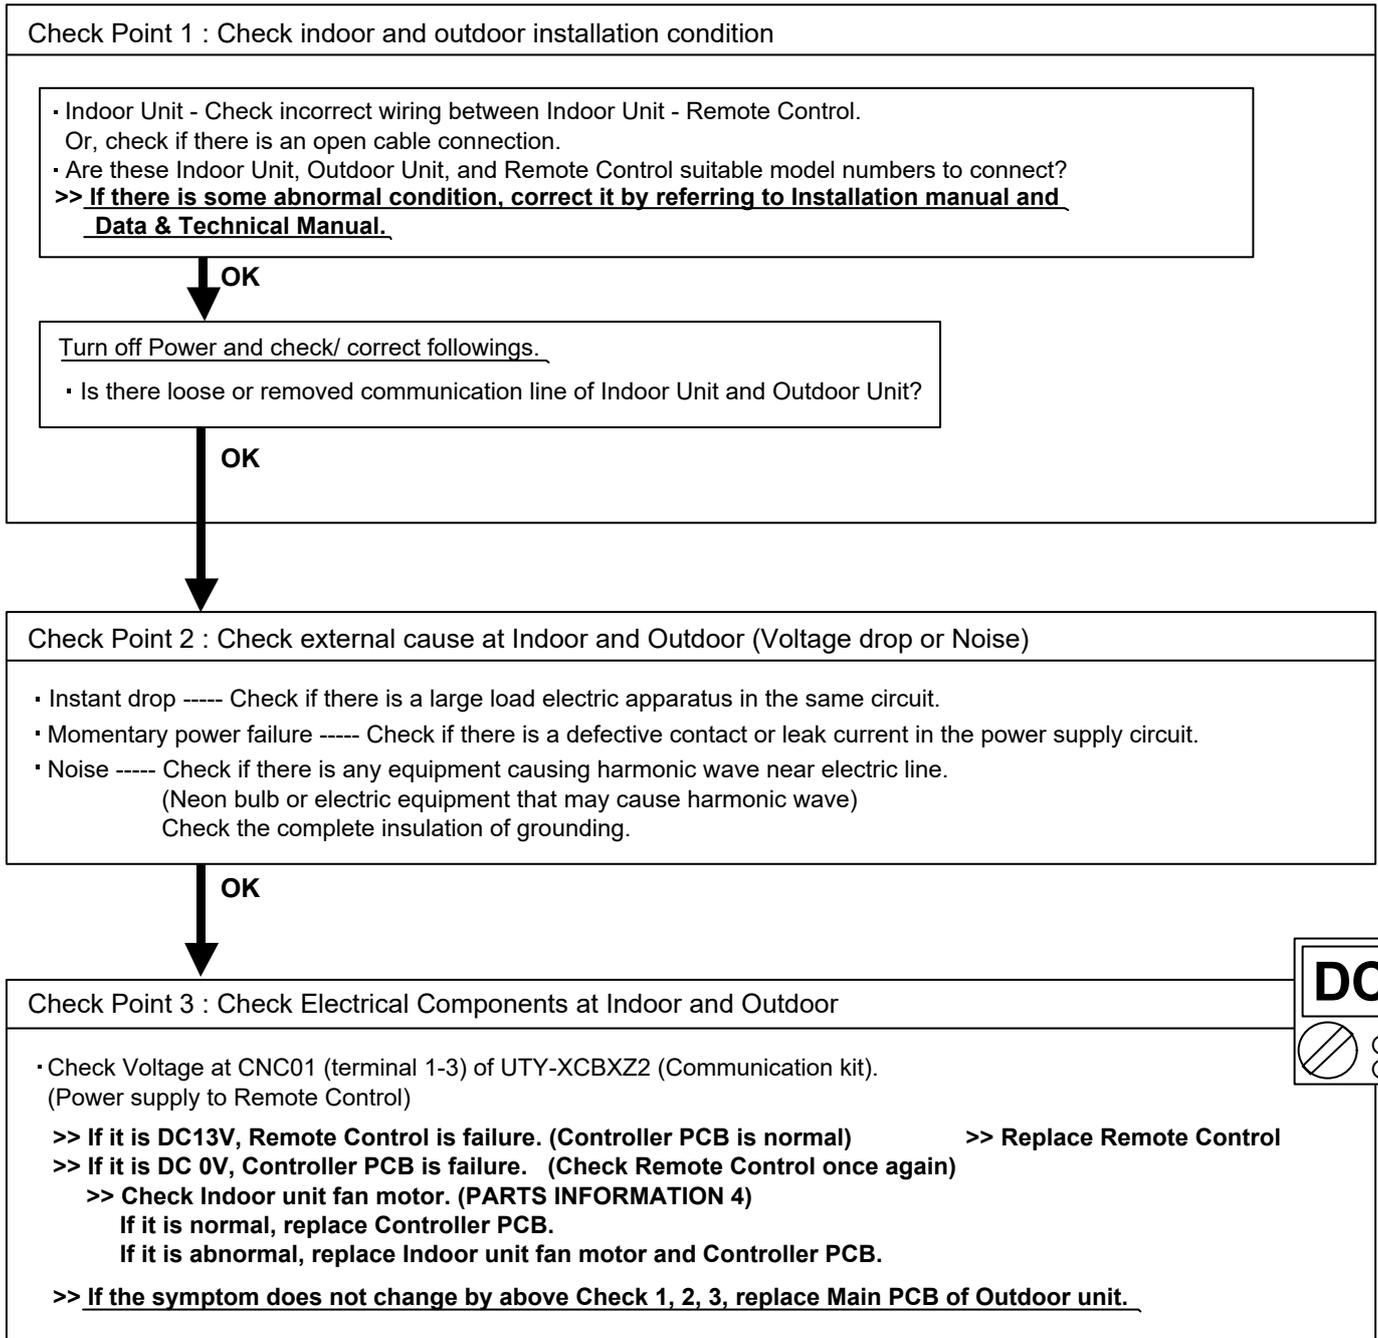


Troubleshooting 23

No cooling / No heating


Forecast of cause:

1. Indoor Unit error
2. Outdoor Unit error
3. Effect by surrounding environment
4. Connection pipe / Connection wire failure
5. Refrigeration cycle failure

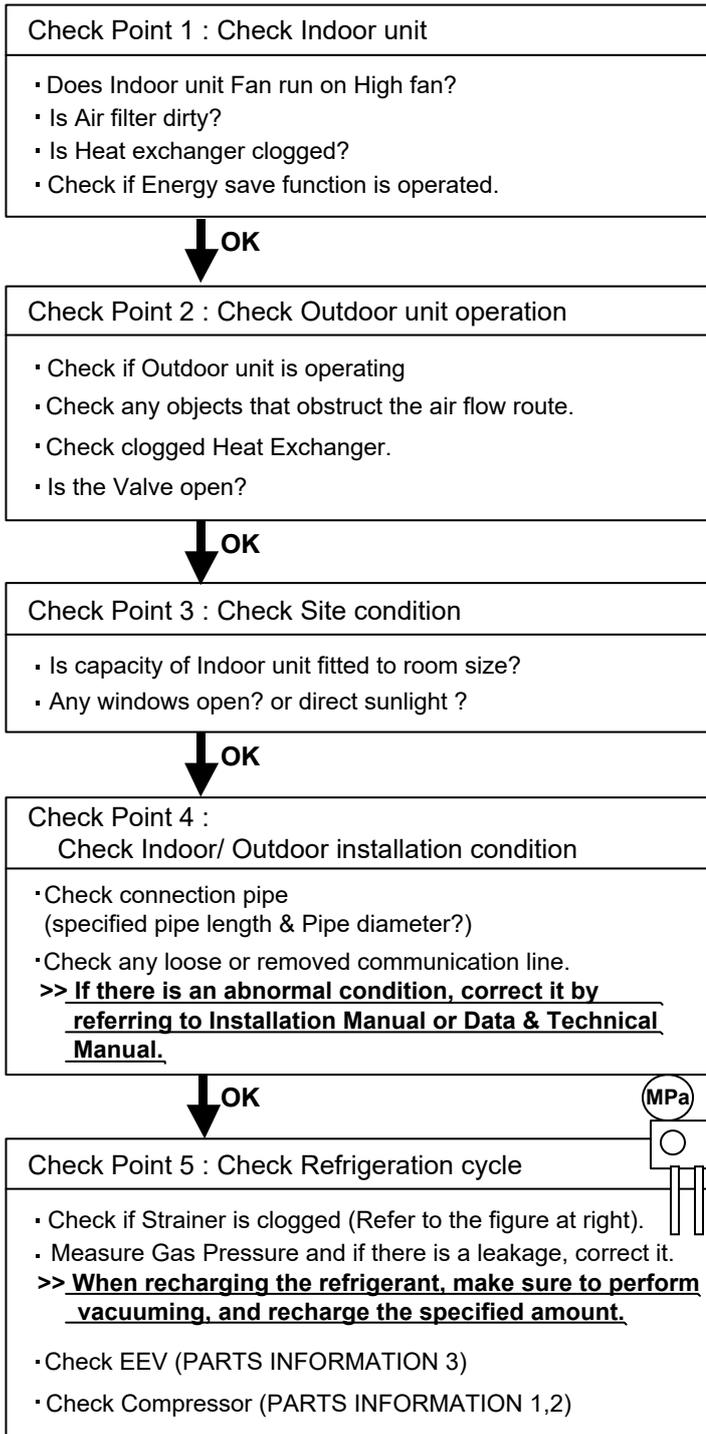

Attention

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference like shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

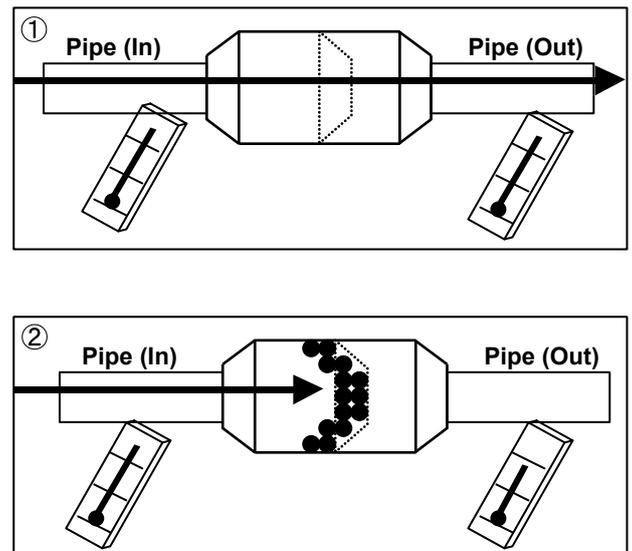


Troubleshooting 24

Abnormal noise

Forecast of cause :

1. Abnormal installation (Indoor/ Outdoor)
2. Fan failure (Indoor/ Outdoor)
3. Compressor failure (Outdoor)

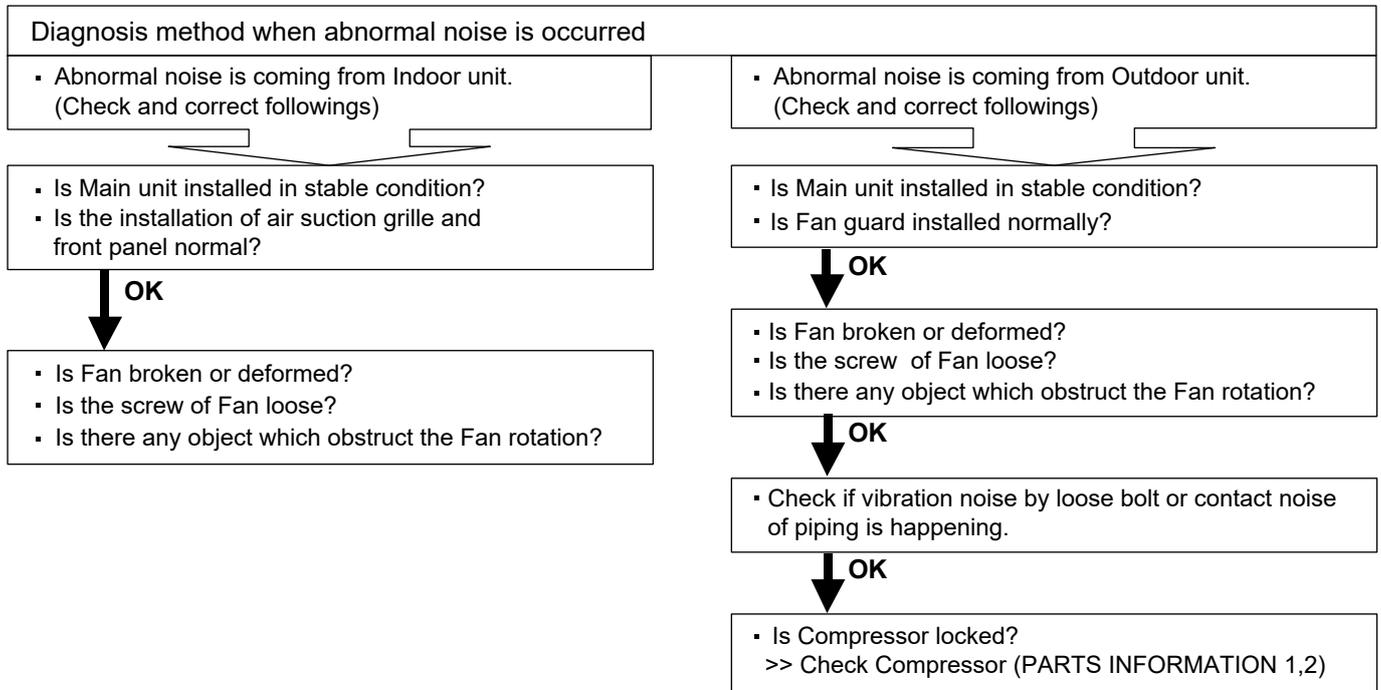


Troubleshooting 25


Water leaking

Forecast of cause:

1. Erroneous installation
2. Drain hose failure

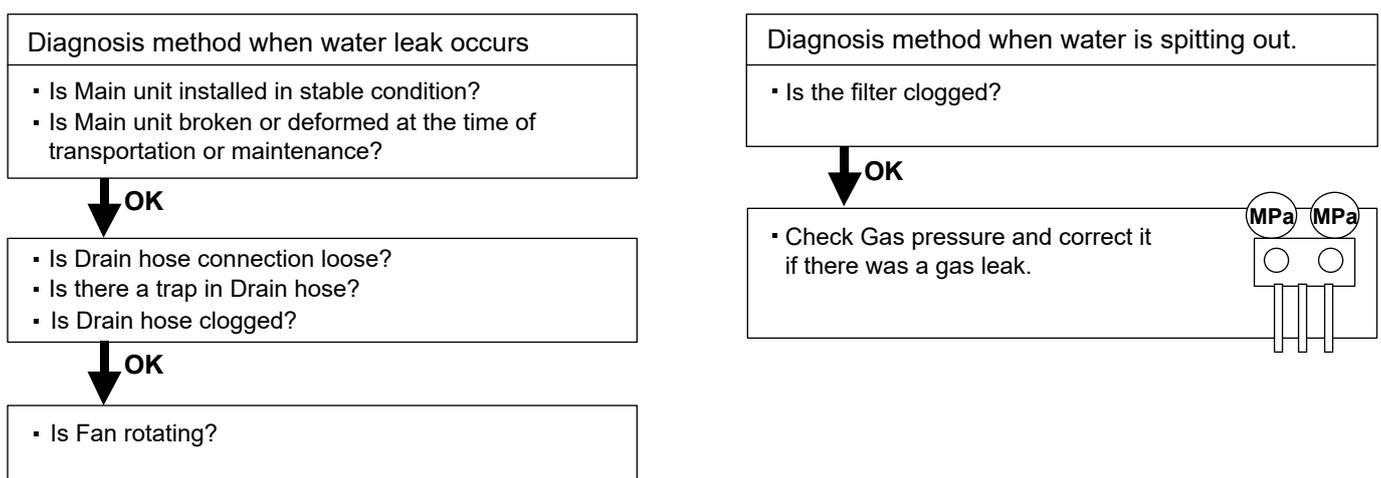

<p>Trouble shooting 26 INDOOR UNIT Error Method: External Communication Error (Communication Error of between Indoor unit to Wireless LAN adapter)</p>	<p>Indicate of Display: Indoor Unit : Operation indicator: 1 times Flash Timerindicator : 8 times Flash Economy indicator: Continuous Flash Error code: [E : 18]</p> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p>
--	--
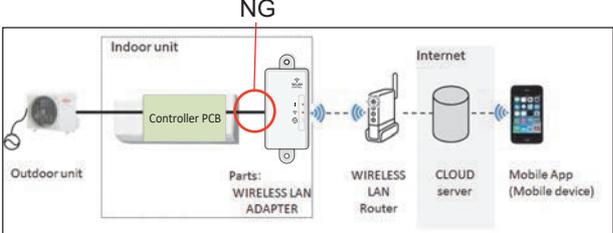
<p>Detective Actuators: Wireless LAN adapter PCB Controller PCB</p>	<p>Detective details: After receiving a signal from the wireless LAN adapter, the same a signal has not been received for 15sec.</p> 
--	---

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection between A/C and Wireless LAN adapter failure 2. Wireless LAN adapter PCB failure 3. Controller PCB failure

<p>Check Point 1 : Check the connection</p> <ul style="list-style-type: none"> • Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB >If there is abnormal condition, correct it. <p>Check the connection condition on the Controller PCB >If there is loose connector, open cable or miswiring, correct it.</p>




<p>Check Point 2 : Replace wireless LAN adapter</p> <ul style="list-style-type: none"> ● If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and Please cancel the air conditioner of the registration on the Mobile App. After the replace adapter, Please perform the pairing on the app. <p>>>Air conditioning de-registration method, refer to page "02 -27+8" >>Pairing method, refer to page "02 - 27+9"</p>
--



<p>Check Point 3 : Replace Controller PCB</p> <ul style="list-style-type: none"> ● <u>If Check Point 2 do not improve the symptom, replace controller PCB.</u>
--

<p>Trouble shooting 27 INDOOR UNIT Error Method: Wireless LAN adapter Error</p>	<p>Indicate of Display: Indoor Unit : Operation indicator: No indication Timer indicator : No indication Economy indicator: Continuous Flash Error code :</p> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast</p>
---	--
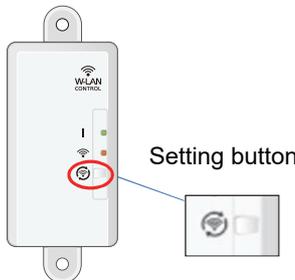
<p>Detective Actuators: Wireless LAN adapter setting button Wireless LAN adapter PCB</p>	<p>Detective details: When the Setting button becomes ON for consecutive 60 or more seconds.</p> <div data-bbox="1165 459 1460 739" style="text-align: right;">  <p>Setting button</p> </div>
---	--


<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Wireless LAN adapter setting button failure 2. Wireless LAN adapter PCB failure
--

<p>Check Point 1 : Check the setting button</p> <ul style="list-style-type: none"> • Check if Setting button is kept pressed. <ul style="list-style-type: none"> > If the Settings button is held down by the foreign matter, <u>Please remove the foreign matter or remove the cause of the button press.</u>
--



<p>Check Point 2 : Replace wireless LAN adapter</p> <ul style="list-style-type: none"> ▶ If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> >>Air conditioning de-registration method, refer to page "02 -27+8" >>Pairing method, refer to page "02 - 27+9"
--

<p>Trouble shooting 28 INDOOR UNIT Error Method: Network Communication Error (Communication Error of between Wireless LAN Router to Wireless LAN adapter)</p>	<p>Indicate of Display: Indoor Unit : Operation indicator: No indication Timer indicator : No indication Economy indicator: Continuous Flash Error code :</p> <p>Wireless LAN adapter : LED 1 (Green) : ON LED 2 (Orange) : Flashing Fast</p>
--	---
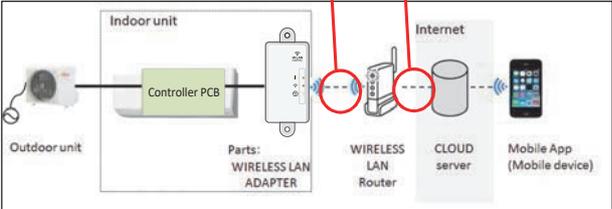
<p>Detective Actuators: Wireless LAN router Wireless LAN adapter PCB</p>	<p>Detective details: When the Not connection between Wireless LAN adapter and Wireless LAN router.</p> 
---	--

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN router 2. Network Connection between Wireless LAN adapter and Wireless LAN router failure 3. Wireless LAN router failure 4. Wireless LAN adapter PCB failure
--

<p>Check Point 1-1 : Check the position of wireless LAN router</p> <p>Please make sure that the wireless LAN router locates to the place in the limitation for the wireless communication, If the distance between the LAN adapter and the router was out of specification, change the position of the router.</p> <p style="text-align: center;">OK</p>	<p>Check Point 1-2 : Check the connection cable</p> <ul style="list-style-type: none"> • Check the connection cable on the Wireless LAN router. >If there is loose connector, open cable or miswiring, correct it. <p style="text-align: center;">OK</p>
--	---


<p>Check Point 2-1 : Check the connection status</p> <ul style="list-style-type: none"> • Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, Please check the transmission between "Wi-Fi products of other than Air conditioner" and "Wireless LAN router". <p style="text-align: center;">OK</p>	<p>Ex.) Wi-Fi products</p> 
---	---

<p style="text-align: center;">NO</p> <p style="text-align: center;">OK</p>	<p>Check Point 2-2 : Check the transmission state</p> <ul style="list-style-type: none"> • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN router has not been outgoing, Please the inquiry to "Wireless LAN router maker".
---	---

<p>Check Point 3 : Turn on power again of Air conditioner</p> <p>▶ If Check Point 1,2 do not improve the symptom, turn on power again of the Air conditioner, please wait 60 seconds.</p> <p style="text-align: center;">OK</p>

<p>Check Point 4 : Replace Wireless LAN adapter</p> <p>▶ If Check Point 3 do not improve the symptom, replace Wireless LAN adapter and Please cancel the air conditioner of the registration on the Mobile App. After the replace adapter, Please perform the pairing on the app.</p> <p>>>Air conditioning de-registration method, refer to page "02 -27+8" >>Pairing method, refer to page "02 - 27+9"</p>
--

<p>Trouble shooting 29 INDOOR UNIT Error Method: Communication Error ("Trou.26" and "Trou.28" are simultaneous Error)</p>	<p>Indicate of Display: Indoor Unit : Operation Indicator : 1 time Flash Timer indicator : 8 time Flash Economy indicator: Continuous Flash Error code: [E: 18]</p> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast</p>
--	--
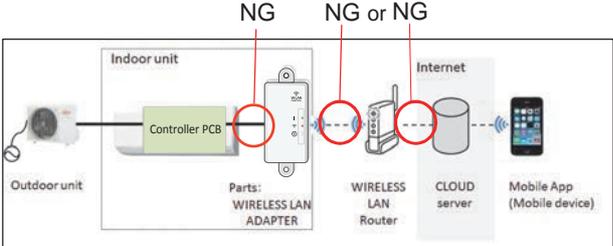
<p>Detective Actuators: Wireless LAN router Wireless LAN adapter PCB Indoor unit Controller PCB</p>	<p>Detective details: When the "External Communication Error" and "Network Communication Error" has occurred at the same time.</p> 
---	---


<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN router, 2. Wireless LAN router failure 3. Connection between A/C and Wireless LAN adapter failure 4. Network connection between Wireless LAN adapter and Wireless LAN router failure 5. Wireless LAN adapter PCB failure, 6. Controller PCB failure

Check Point 1-1 : Check the position of wireless LAN router
Please make sure that the wireless LAN router locates to the place in the limitation for the wireless communication, If the distance between the LAN adapter and the router was out of specification, change the position of the router.

Check Point 1-2 : Check the connection cable
• Check the connection cable on the Wireless LAN router.
>If there is loose connector, open cable or miswiring, correct it.

OK

OK
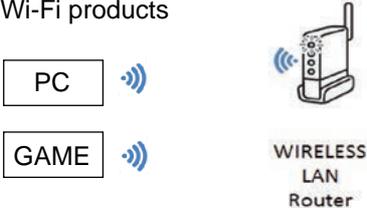
<p>Check Point 2 : Check the connection status and transmission state</p>	
<ul style="list-style-type: none"> • Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, <u>Please check the transmission between "Wi-Fi products of other than Air conditioner" and "Wireless LAN ruter".</u> > When there is no problem with Wi-Fi products >> <u>Refer to "Check Point 4".</u> 	<p>Ex.) Wi-Fi products</p> 
<ul style="list-style-type: none"> • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN Router has not been outgoing, <u>Please the inquiry to "Wireless LAN router maker".</u> Did the display pattern will change? Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) :ON 	

YES

NO

Check Point 3-1 : Turn on power again of Air conditioner

- If Check Point 1,2 do not improve the symptom,
turn on power again of the Air conditioner,please wait 60 seconds.
> When the flashing pattern of the LED 2(Orange) is "ON" >> Refer to "Check Point 3-2".
> When the flashing pattern of the LED 2(Orange) is "Flashing Fast" >> Refer to "Check Point 4".

To NEXT PAGE

CONTINUATION

YES

Check Point 3-2 : Check the connection

- Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB
>If there is abnormal condition, correct it.
- Check the connection condition on the Controller PCB
>If there is loose connector, open cable or miswiring, correct it.

OK

Check Point 4 : Replace Wireless LAN adapter

- ▶ If Check Point 2,3 do not improve the symptom, replace Wireless LAN adapter and Please cancel the air conditioner of the registration on the Mobile App.
After the replace adapter, Please perform the pairing on the app.
>>Air conditioning de-registration method, refer to page "02 -27+8"
>>Pairing method, refer to page "02 - 27+9"

OK

Check Point 5 : Replace Controller PCB


- ▶ If Check Point 4 do not improve the symptom, replace controller PCB.

<p>Trouble shooting 30 <u>INDOOR UNIT Error Method:</u> Wireless LAN adapter Non-Energized</p>	<p><u>Indicate of Display:</u> Indoor Unit : Operation indicator: 1 time Flash Timer indicator : 8 time Flash Economy indicator: Continuous Flash Error code : [E : 18]</p> <p>Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF</p>
--	--

<p><u>Detective Actuators:</u> Indoor unit Controller PCB Wireless LAN adapter PCB</p>	<p><u>Detective details:</u> When the does not output the DC12 voltage from Controller PCB.</p>
---	---

<p><u>Forecast of Cause:</u></p> <ol style="list-style-type: none"> 1. Indoor unit Controller PCB failure 2. Wireless LAN adapter PCB failure 3. Wiring connection failure
--

<p>Check Point 1 : Check the Sleep mode</p> <ul style="list-style-type: none"> • Press the Wireless LAN adapter setting button the 3 seconds or more. <p>Did the display pattern will change?</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) : Flashing Fast </div>

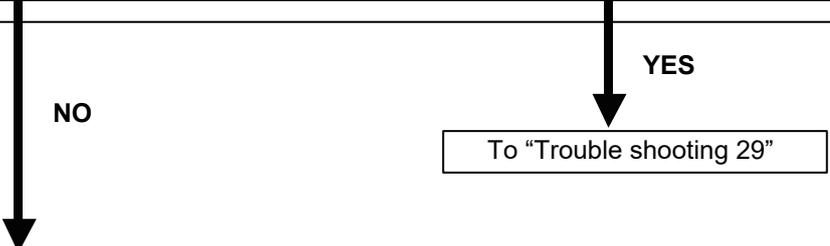

<p>Check Point 2 : Check the connection</p> <ul style="list-style-type: none"> • Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB >If there is abnormal condition, correct it. Check the connection condition on the Controller PCB >If there is loose connector, open cable or miswiring, correct it.




<p>Check Point 3 : Check the Wireless LAN adapter PCB and Controller PCB</p> <ul style="list-style-type: none"> • Check Voltage at CN12 (terminal 1-2) of Controller PCB. >If it is DC 0V, Controller PCB is failure. ► <u>Replace Controller PCB.</u> >If it is DC12V, Wireless LAN adapter PCB failure. ► <u>Replace Wireless LAN adapter and please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the App.</u> >>Air conditioning de-registration method, refer to page "02 -27+8" >>Pairing method, refer to page "02 - 27+9" 	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> DC  </div>
--	---

Trouble shooting 31 INDOOR UNIT Error Method: Wireless LAN adapter Sleep mode	Indicate of Display: <table border="0"> <tr> <td data-bbox="641 202 1031 328"> Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication] </td> <td data-bbox="1047 202 1339 328"> Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF </td> </tr> </table>	Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF
Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF		

Detective Actuators: Sleep mode	Detective details: When the state in which fly a wireless(SSID) have passed 1 hour.
---	---

Forecast of Cause: 1. Sleep mode
--

Check Point 1 : Check the sleep mode
<ul style="list-style-type: none"> Press the Wireless LAN adapter setting button the 3 seconds or more. Did the display pattern will change? <div style="border: 1px solid black; padding: 2px; width: fit-content;"> Wireless LAN adapter : LED 1 (Green) : ON , LED 2 (Orange) : Flashing Fast </div>



To "Trouble shooting 28"

Air Conditioning De-registration Method

If you replace the Wireless LAN adapter, you will need to de-register all of the conditioner information on the App. Unregister method is as follows.

1 Launch the mobile app(FGL air).



2 Please long-push the registered "Device name" of Air Conditioner.



3 Then will display the "Unregister" button. Please tap the "Unregister" button.



4 Please tap the "Yes" .



5 Air Conditioner Unregister is complete.

Air conditioner registration Pairing Method

Choose from the following modes to connect your Air conditioner to your Wireless LAN router.

- Note:**
- Before starting this setting, wait for **60 seconds** or more after the power supply is connected to the air conditioner (via breaker or plug).
 - If both LED 1 and 2 are off, the WLAN adapter may be in Sleep mode. Be sure it is deactivated before setting up the wireless LAN. (Refer to "SETTING MANUAL")
 - Check that the smartphone or tablet PC is linked to the wireless router you are connecting the air conditioner. The setting will not work if it is not connected to the same wireless router.
 - The display screen design may differ depending on the version of the mobile app.
 - To control 2 or more air conditioners with the same smartphone or tablet PC, repeat the setup of the chosen mode.


Button Mode

*Lighting pattern: ○ OFF ● ON ● Flashing


1 Launch the mobile app(FGL air).




2 Sign in with your Email address and password (as registered in "4.2. User registration") following the screen on the mobile app.

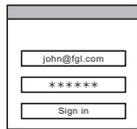


3 Press the [+] button to add a new air conditioner.

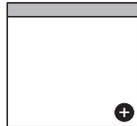


4 Confirm that LED 2 is flashing.(On/off at 2-second intervals.) Then select [Button mode] on the screen.
If LED 1 and 2 are off, push the Setting button once.
(Refer to "5. SLEEP MODE" SETTING MANUAL)

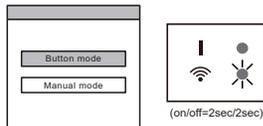


5 Press the WPS button on the wireless router that you are connecting to.
Refer to the operating manual of the wireless router for the location of the button and how to press it.

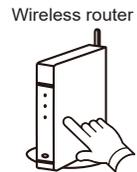

6 Confirm that LED 2 is flashing.
(On/off at 2-second intervals.)
Then press and hold the Setting button on the WLAN adapter for 3 seconds.




LED 2 lighting will change.
(on/off: 2sec/2sec → 2sec/0.5sec)

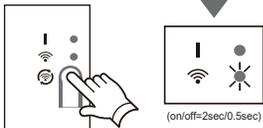


Confirm that the LED 1 and 2 is both on to proceed.



7 Press [Register] to start the connection with the wireless router.

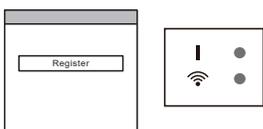

LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

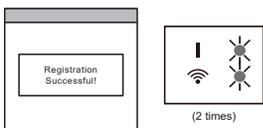


Manual mode

*Lighting pattern: ○ OFF ● ON ● Flashing

1~3 See steps 1 to 3 in "4.3.1. Button mode"


4 Select [Manual mode].

If LED 1 and 2 are off, push the Setting button once. (Refer to "5. SLEEP MODE" SETTING MANUAL)

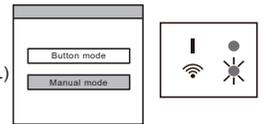


[For Android]

5 Select the SSID of the air conditioner you are connecting to.

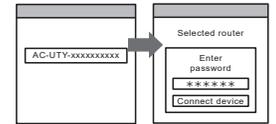


6 Input the PIN code written on the WLAN label.

7 Select the SSID of the wireless router you are connecting to.
Input the wireless router (WLAN access point) password then press [Connect device].

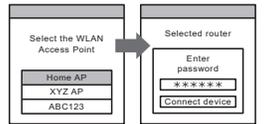


8 LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

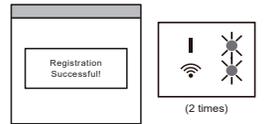


[For iOS]


5 Select [Open W-LAN setting] or activate the wireless LAN by pressing the Home button -> [Setting] -> [Wi-fi].
Select the SSID of the air conditioner you are connecting to.

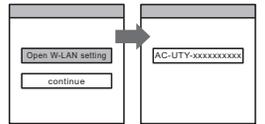


6 Input the PIN code written on the WLAN label.

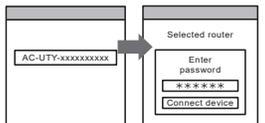

7 Select the SSID of the wireless router you are connecting to.
Input the wireless router (WLAN Access Point) password then press [Connect device].

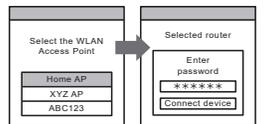


LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

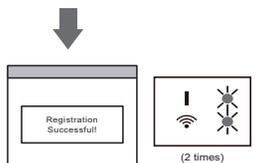

4. PARTS INFORMATION

PARTS INFORMATION 1

Compressor

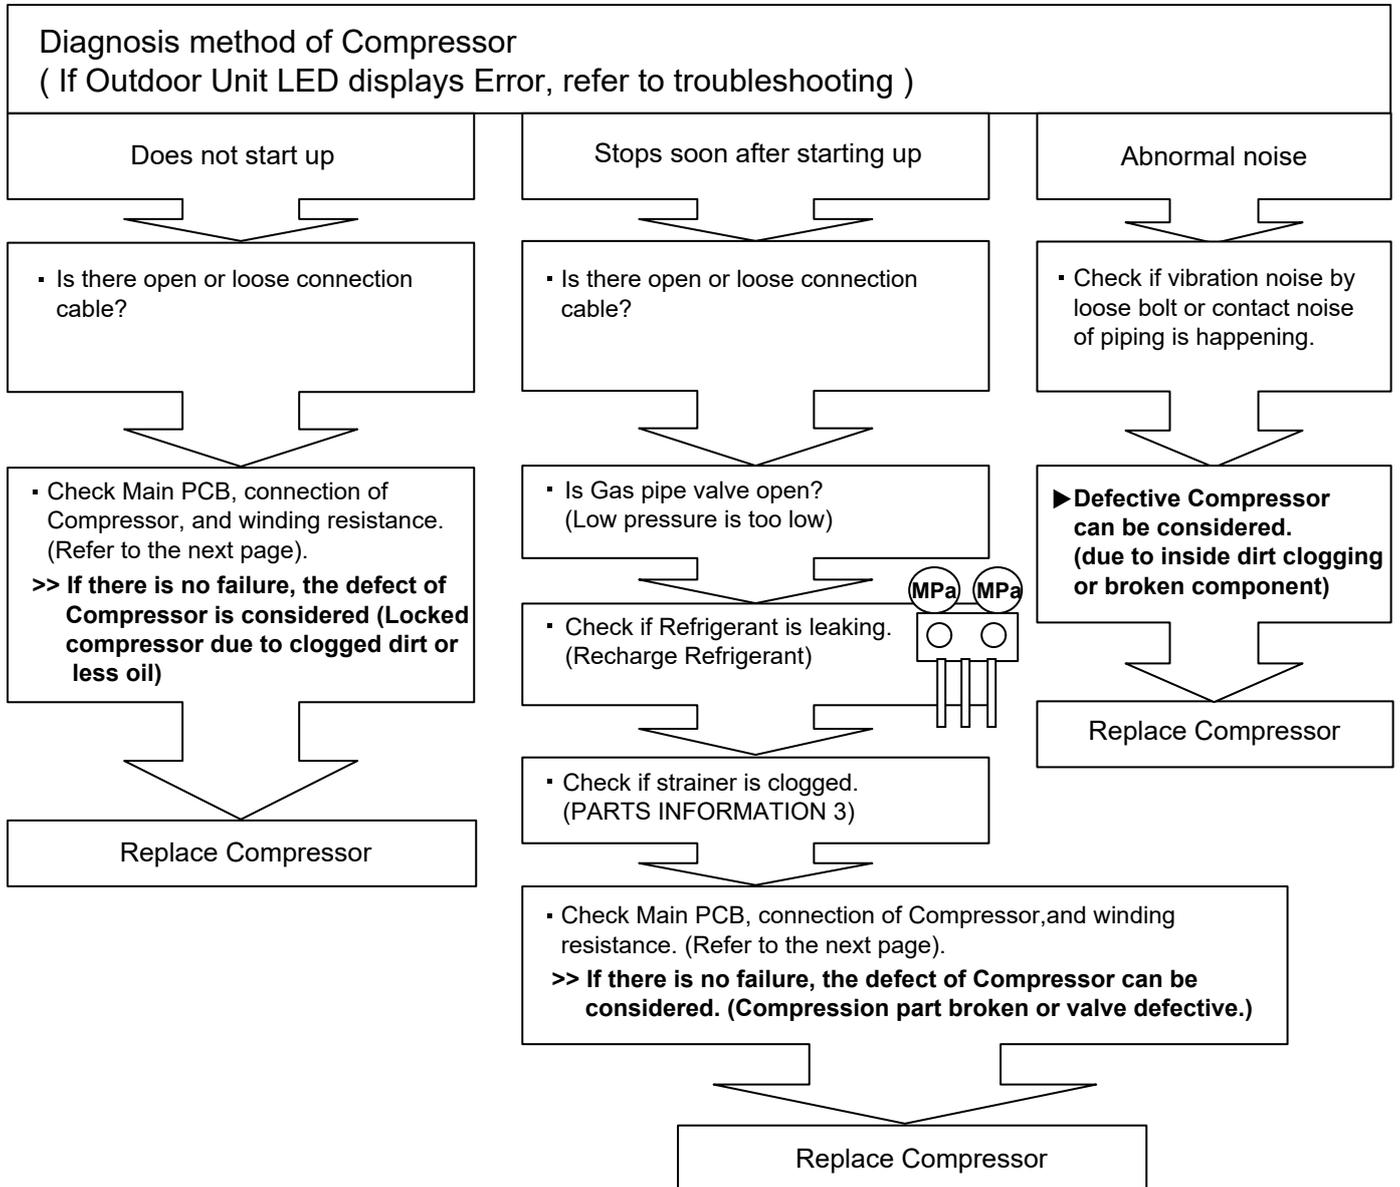


PARTS INFORMATION 2

Inverter compressor


Check Point 1 : Check connection

- Check terminal connection of Compressor (loose or incorrect wiring)

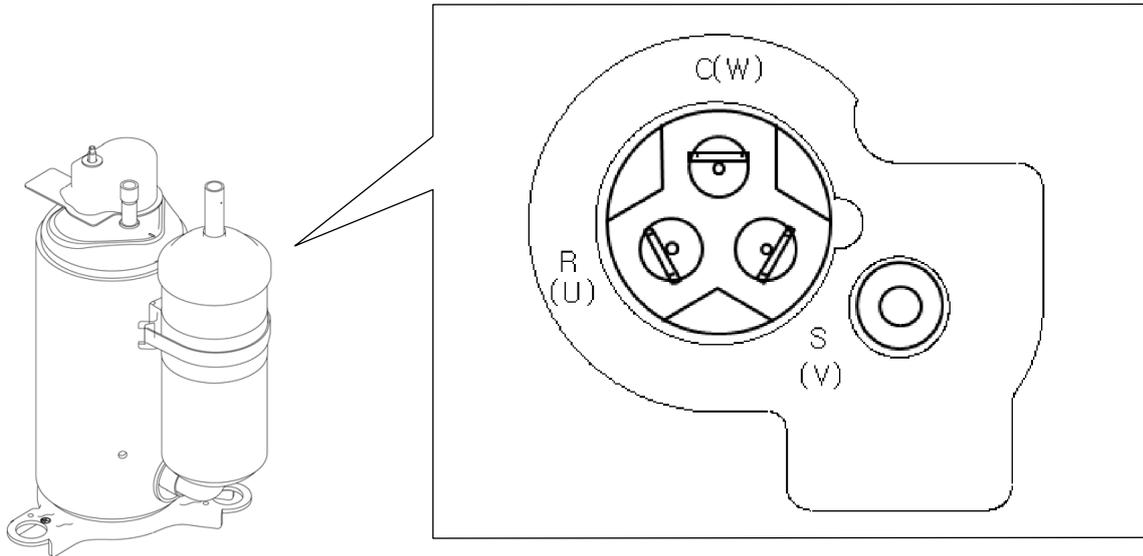


Check Point 2 : Check winding resistance

- Check winding resistance of each terminal
 - ▶ If the resistance value is 0Ω or infinite, replace Compressor.

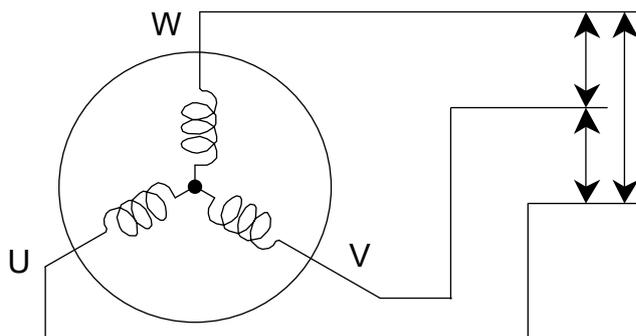

Resistance value :
 1.862Ω at 25°C

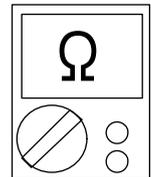

Check Point 3 : Replace main PCB


- ▶ If the symptom does not change with above Check 1, 2, replace main PCB.

PARTS INFORMATION 3

Outdoor unit, electronic expansion valve (EEV)

Check Point 1 : Check Connections

- Check connection of connector (P30)
(Loose connector or open cable)

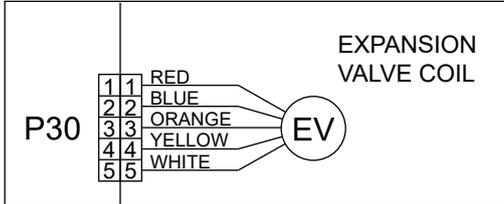

Check Point 2 : Check coil of EEV

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value
White - Red	$46 \Omega \pm 4 \Omega$ at 20°C
Yellow - Red	
Orange - Red	
Blue - Red	

- ▶ If Resistance value is abnormal, replace EEV.

Check Point 3 : Check Noise at start up

- Turn on Power and check operation noise.
- ▶ **If an abnormal noise does not show, replace Main PCB.**


Check Point 4 : Check Voltage from main PCB.

- Remove Connector and check Voltage (DC12V)
- ▶ If it does not appear, replace main PCB.




Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed, it has a temp. difference between Inlet and Outlet.


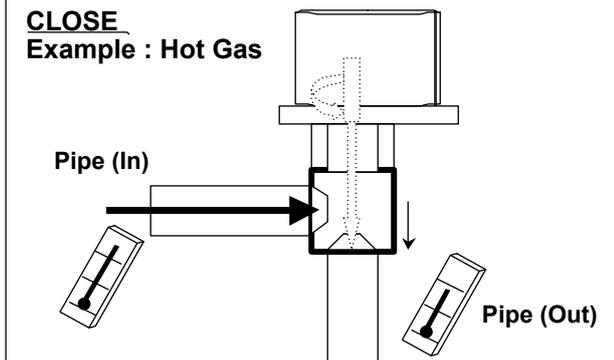


If it is open, it has no temp. difference between Inlet and Outlet.

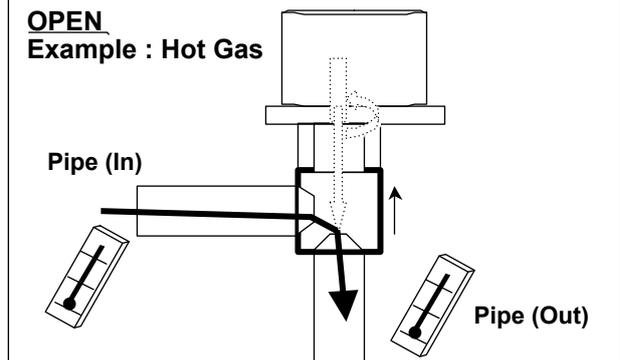

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference as shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

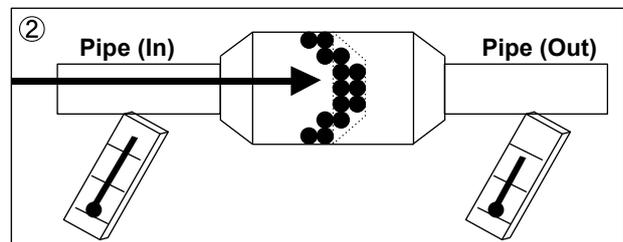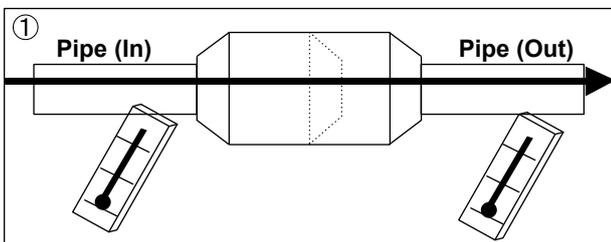

PARTS INFORMATION 4

Indoor unit fan motor

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
>>If Fan or Bearing is abnormal, replace it.

Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
**>>If they are short-circuited (below 300 kΩ),
replace Indoor fan motor and controller PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Blue)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Earth terminal (GND)
5	No function
6 (Red)	DC voltage (Vm)

PARTS INFORMATION 5

Outdoor unit fan motor


Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
>>If Fan or Bearing is abnormal, replace it.

Check Point 2 : Check resistance of Outdoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
**>>If they are short-circuited (below 300 kΩ),
replace Outdoor fan motor and main PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

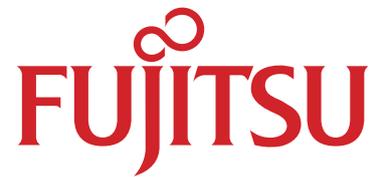

FUJITSU GENERAL LIMITED

3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan